

# 5210, 5310, 5410, and 5510 Tractors



D C G

## TECHNICAL MANUAL 5210, 5310, 5410, and 5510 Tractors TM1716 26APR04 (ENGLISH)

For complete service information also see:

|                                                                       |        |
|-----------------------------------------------------------------------|--------|
| Component Technical Manual 3029 2.9L<br>Engine .....                  | CTM125 |
| Component Technical Manual 4045 4.5L<br>Engine .....                  | CTM104 |
| Component Technical Manual 4045 4.5L<br>Mechanical Fuel Systems ..... | CTM207 |
| Alternators and Starting Motors .....                                 | CTM77  |

**John Deere Augusta Works**  
LITHO IN U.S.A.

Sample manual. Download All 1436 pages at:

<https://www.bobmanualstore.com/downloads/john-deere-5210-5310-5410-5510-tractor-service-repair-technical-manual/>



T M 1 7 1 6  
2 6 A P R 0 4

# Introduction

[0-5410-5510-tractor-service-repair-technical-manual/](https://www.bobmanuaalstore.com/downloads/john-deere-5210-5310-5410-5510-tractor-service-repair-technical-manual/)

## Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX, TMIFC -19-29SEP98-1/1

Sample manual. Download All 1436 pages at:

<https://www.bobmanuaalstore.com/downloads/john-deere-5210-5310-5410-5510-tractor-service-repair-technical-manual/>

TM1716 (26APR04)

5210, 5310, 5410, and 5510 Tractors

042604

PN=2

# Contents

## SECTION 10—General Information

- Group 05—Safety
- Group 10—General Specifications
- Group 20—Fuel and Lubricants
- Group 25—Serial Number Locations
- Group 30—Features and Accessories

## SECTION 20—Engine Repair

- Group 05—Engine
- Group 10—Cooling System

## SECTION 30—Fuel and Air Repair

- Group 05—Fuel System
- Group 10—Air Intake System
- Group 15—Speed Control Linkage

## SECTION 40—Electrical Repair

- Group 05—Battery, Starter and Alternator
- Group 10—Electrical System Components
- Group 15—Wiring Harness

## SECTION 50—Power Train Repair

- Group 05—Clutch Housing
- Group 10—Clutch Assembly—  
CollarShift/SyncShuttle™ Transmissions
- Group 11—Clutch Assembly—PowrReverser™  
Transmission
- Group 12—PowrReverser™
- Group 15—CollarShift/SyncShuttle™ Transmission
- Group 16—PowrReverser™ Transmission
- Group 20—Rear PTO Drive Shaft
- Group 25—Differential
- Group 30—Final Drives
- Group 35—Mechanical Front Wheel Drive
- Group 40—Creeper Assembly

## SECTION 60—Steering and Brake Repair

- Group 05—Steering Repair
- Group 10—Brake Repair

## SECTION 70—Hydraulic Repair

- Group 05—Hydraulic Pump and Filter
- Group 06—Hydraulic Oil Cooler
- Group 10—Rockshaft
- Group 15—Dual Selective Control Valve

- Group 16—Single (Third) Selective Control Valve
- Group 20—Hydraulic Mid Mount Coupler
- Group 25—Hydraulic Power Beyond

## SECTION 80—Miscellaneous Repair

- Group 05—Front Axle—2WD
- Group 10—Wheels
- Group 15—3-Point Hitch

## SECTION 90—Operator Station Repair

- Group 05—Seat and Support
- Group 06—Control Console and Panel—Tractors  
Without Cab
- Group 10—ROLL-GARD
- Group 15—Cab Components
- Group 20—Air Conditioning System
- Group 25—Heating System

## SECTION 210—Operational Checkout Procedures

- Group 10—Operational Checkout Procedures

## SECTION 220—Engine Operation, Tests, and Adjustments

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests, and Adjustments

## SECTION 230—Fuel/Air Operation, Tests, and Adjustments

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests and Adjustments

## SECTION 240—Electrical System Operation, Tests & Adjust

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Test and Adjust
- Group 20—Wiring Schematics

## SECTION 250—Power Train Operation, Tests, and Adjustments

- Group 05—Component Location—Collar Shift and

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2004  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright © 2000

|    |                                                                             |
|----|-----------------------------------------------------------------------------|
| 10 | SyncShuttle™ Transmissions                                                  |
|    | Group 06—Component Location—PowrReverser™<br>Transmission                   |
|    | Group 10—Theory of Operation—Collar Shift and<br>SyncShuttle™ Transmissions |
| 20 | Group 11—Theory of Operation—PowrReverser™<br>Transmission                  |
|    | Group 15—Diagnosis, Tests, and Adjustments—<br>CS/SS Transmissions          |
|    | Group 16—Diagnosis, Tests, and Adjustments—<br>PowrReverser™                |

**SECTION 260—Steering and Brake Operation,  
Tests, and Adjustments**

|    |                                           |
|----|-------------------------------------------|
|    | Group 05—Component Location               |
|    | Group 10—Theory of Operation              |
| 40 | Group 15—Diagnosis, Tests and Adjustments |

**SECTION 270—Hydraulic System Operation, Tests,  
and Adjustments**

|    |                                      |
|----|--------------------------------------|
|    | Group 05—Component Location          |
|    | Group 10—Theory of Operation         |
| 50 | Group 15—Diagnosis                   |
|    | Group 16—Hydraulic Tests—Without SCV |
|    | Group 17—Hydraulic Tests—With SCV    |
|    | Group 18—Hydraulic Tests—All         |
|    | Group 19—Adjustments                 |
| 60 | Group 20—Hydraulic Schematics        |

**SECTION 290—Operator Station**

|    |                                            |
|----|--------------------------------------------|
|    | Group 05—Component Location                |
|    | Group 10—Theory of Operation               |
| 70 | Group 15—Diagnosis, Tests, and Adjustments |

**SECTION 299—Dealer Fabricated Tools**

|  |                                  |
|--|----------------------------------|
|  | Group 00—Dealer Fabricated Tools |
|--|----------------------------------|

80

90

210

220

230

240

250

260

270

290

299

INDX

*Contents*

220

230

240

250

260

270

290

299

INDX

# Section 10 General Information

## Contents

| Page                                                                         | Page     |
|------------------------------------------------------------------------------|----------|
| <b>Group 05—Safety</b> . . . . .                                             | 10-05-1  |
| <b>Group 10—General Specifications</b>                                       |          |
| Machine Specifications—5210 and 5310 . . . . .                               | 10-10-1  |
| Travel Speeds—5210 and 5310 . . . . .                                        | 10-10-7  |
| Machine Specifications—5410 . . . . .                                        | 10-10-10 |
| Travel Speeds—5410 . . . . .                                                 | 10-10-13 |
| Machine Specifications—5510 . . . . .                                        | 10-10-16 |
| Travel Speeds—5510 . . . . .                                                 | 10-10-19 |
| Service Recommendations for O-Ring<br>Boss Fittings . . . . .                | 10-10-21 |
| Service Recommendations for Flat Face<br>O-Ring Seal Fittings . . . . .      | 10-10-23 |
| Metric Cap Screw Torque Values—Grade<br>7 . . . . .                          | 10-10-24 |
| Metric Bolt and Cap Screw Torque Values . . . . .                            | 10-10-25 |
| Unified Inch Bolt and Cap Screw Torque<br>Values . . . . .                   | 10-10-26 |
| Abbreviations . . . . .                                                      | 10-10-27 |
| <b>Group 20—Fuel and Lubricants</b>                                          |          |
| Diesel Fuel Specifications . . . . .                                         | 10-20-1  |
| Storing Fuel . . . . .                                                       | 10-20-1  |
| Do Not Use Galvanized Containers . . . . .                                   | 10-20-2  |
| Fill Fuel Tank . . . . .                                                     | 10-20-2  |
| Diesel Engine Oil . . . . .                                                  | 10-20-3  |
| Diesel Engine Coolant . . . . .                                              | 10-20-4  |
| Liquid Coolant Conditioner . . . . .                                         | 10-20-5  |
| Transmission and Hydraulic Oil . . . . .                                     | 10-20-6  |
| MFWD Gear Oil . . . . .                                                      | 10-20-7  |
| Grease (Specific Application) . . . . .                                      | 10-20-7  |
| Grease . . . . .                                                             | 10-20-8  |
| Alternative and Synthetic Lubricants . . . . .                               | 10-20-9  |
| Lubricant Storage . . . . .                                                  | 10-20-9  |
| <b>Group 25—Serial Number Locations</b>                                      |          |
| Serial Numbers . . . . .                                                     | 10-25-1  |
| Product Identification Number Location . . . . .                             | 10-25-1  |
| Engine Serial Number Location . . . . .                                      | 10-25-1  |
| Fuel Injection Pump Serial Number Location . . . . .                         | 10-25-1  |
| Alternator Serial Number Location . . . . .                                  | 10-25-2  |
| Power Steering Valve Serial Number<br>Location . . . . .                     | 10-25-2  |
| Starter Serial Number Location . . . . .                                     | 10-25-2  |
| Transmission Serial Number Location . . . . .                                | 10-25-2  |
| Front Axle (2WD) Serial Number Location . . . . .                            | 10-25-3  |
| Mechanical Front Wheel Drive (MFWD) Serial<br>Number Location . . . . .      | 10-25-3  |
| Air Conditioning Compressor Serial Number<br>Location . . . . .              | 10-25-3  |
| <b>Group 30—Features and Accessories</b>                                     |          |
| Features and Accessories . . . . .                                           | 10-30-1  |
| Standard Features—5210 and 5310 . . . . .                                    | 10-30-2  |
| Standard Features—5410 and 5510 . . . . .                                    | 10-30-3  |
| Standard Features—5210 through 5510 . . . . .                                | 10-30-4  |
| Factory Installed Optional Equipment<br>(5210—5510) . . . . .                | 10-30-5  |
| Field Installed Optional Kits and<br>Accessories—5210 Through 5510 . . . . . | 10-30-6  |



## Recognize Safety Information

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-29SEP98-1/1

T81389 -UN-07DEC88

## Understand Signal Words

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



**⚠ WARNING**

**⚠ CAUTION**

DX,SIGNAL -19-03MAR93-1/1

TS187 -19-30SEP88

## Follow Safety Instructions

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.



DX,READ -19-03MAR93-1/1

TS201 -UN-23AUG88

10  
05  
2

### Handle Fluids Safely—Avoid Fires

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



TS227 -UN-23AUG88

DX,FLAME -19-29SEP98-1/1

### Prevent Battery Explosions

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



TS204 -UN-23AUG88


DX,SPARKS -19-03MAR93-1/1

### Prepare for Emergencies

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

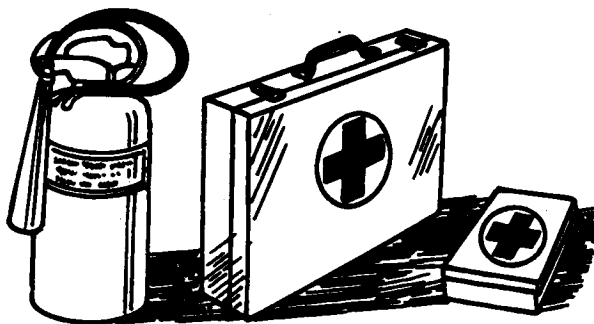

TS281 -UN-23AUG88

DX,FIRE2 -19-03MAR93-1/1

## Prevent Acid Burns

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 quarts).
3. Get medical attention immediately.

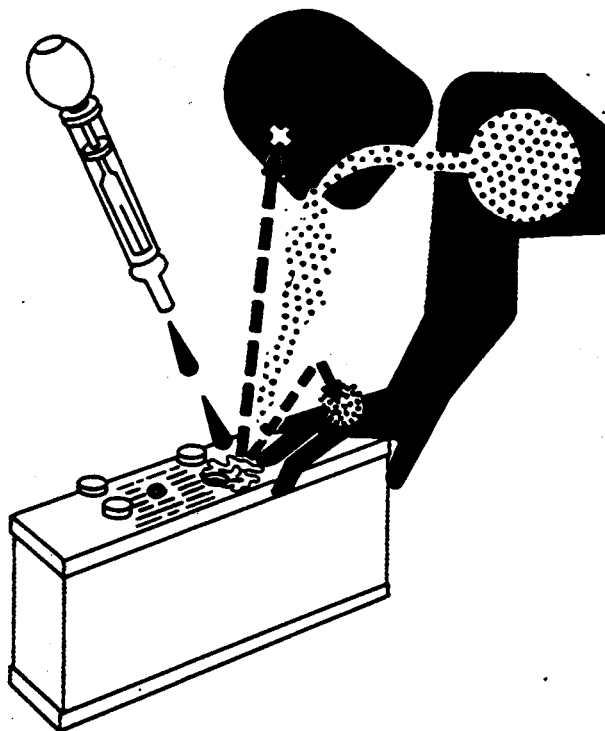

TS203 -UN-23AUG88

DX,POISON -19-21APR93-1/1

## Service Cooling System Safely

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.



TS281 -UN-23AUG88

DX,RCAP -19-04JUN90-1/1

10  
05  
4


## Handle Chemical Products Safely

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)

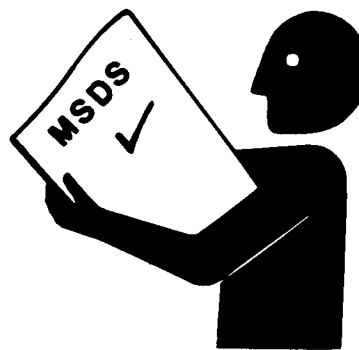

TS1132 -UN-26NOV90

DX,MSDS,NA -19-03MAR93-1/1


## Avoid High-Pressure Fluids

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

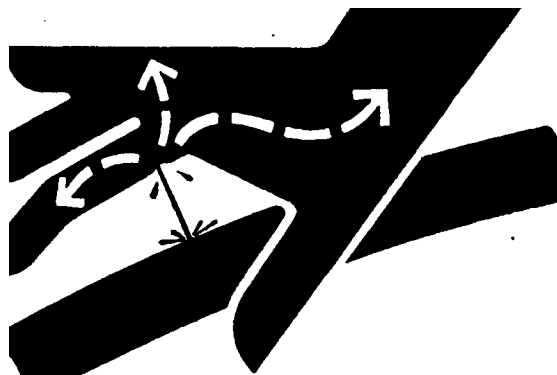


X9811 -UN-23AUG88

DX,FLUID -19-03MAR93-1/1

### Park Machine Safely

Before working on the machine:

- Lower all equipment to the ground.
- Shift transmission to PARK.
- Engage park brake if equipped.
- Stop the engine and remove the key.
- Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.

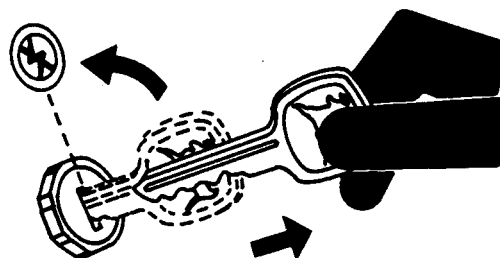


TS230 -UN-24MAY89

CED,OUO1085,7 -19-26JUL00-1/1

### Support Machine Properly

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

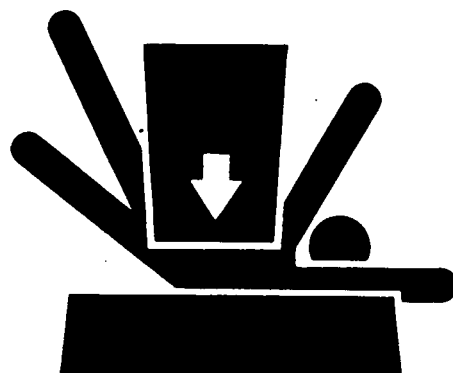

TS229 -UN-23AUG88

CED,OUO1085,8 -19-26JUL00-1/1


### Wear Protective Clothing

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

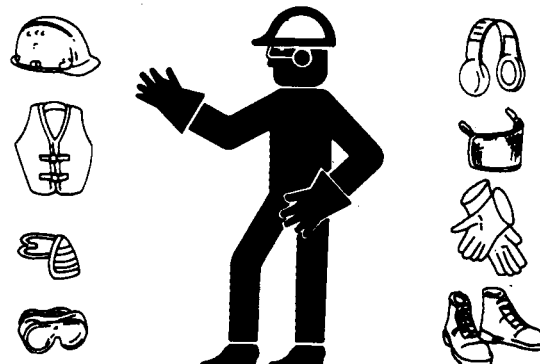

TS206 -UN-23AUG88


DX,WEAR -19-10SEP90-1/1

10  
05  
6

### Work in Clean Area

Before starting a job:

- Clean work area and machine.
- Make sure you have all necessary tools to do your job.
- Have the right parts on hand.
- Read all instructions thoroughly; do not attempt shortcuts.

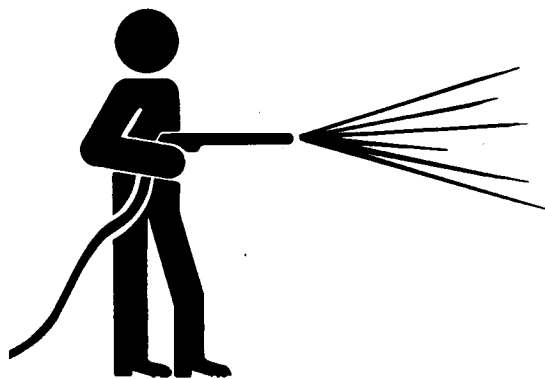


DX,CLEAN -19-04JUN90-1/1

T6642EJ -JUN-18OCT88

### Service Machines Safely

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

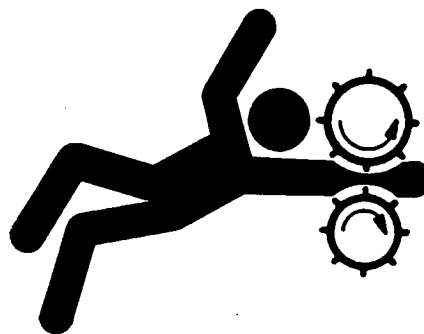


DX,LOOSE -19-04JUN90-1/1

TS228 -JUN-23AUG88

### Work in Ventilated Area

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area

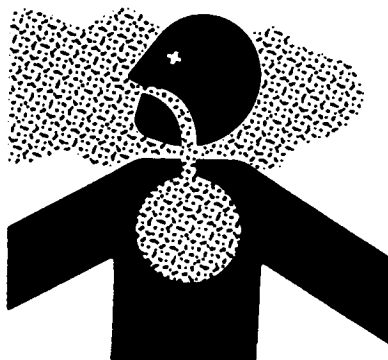

DX,AIR -19-17FEB99-1/1

TS220 -JUN-23AUG88

### Illuminate Work Area Safely

Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.



DX,LIGHT -19-04JUN90-1/1

TS223 -JUN-23AUG88

### Replace Safety Signs

Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.




DX,SIGNS1 -19-04JUN90-1/1

TS201 -UN-23AUG88

### Use Proper Lifting Equipment

Lifting heavy components incorrectly can cause severe injury or machine damage.

Follow recommended procedure for removal and installation of components in the manual.

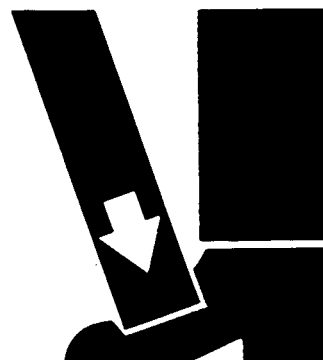


DX,LIFT -19-04JUN90-1/1

TS226 -UN-23AUG88

### Keep ROPS Installed Properly

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.

The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

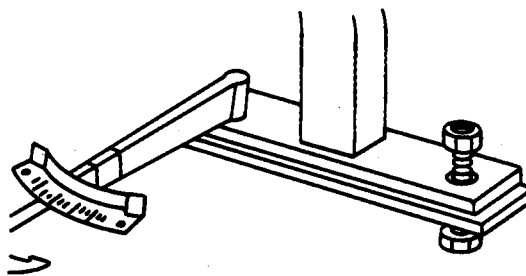

DX,ROPS3 -19-03MAR93-1/1

TS212 -UN-23AUG88

10  
05  
8

## Service Tires Safely


Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

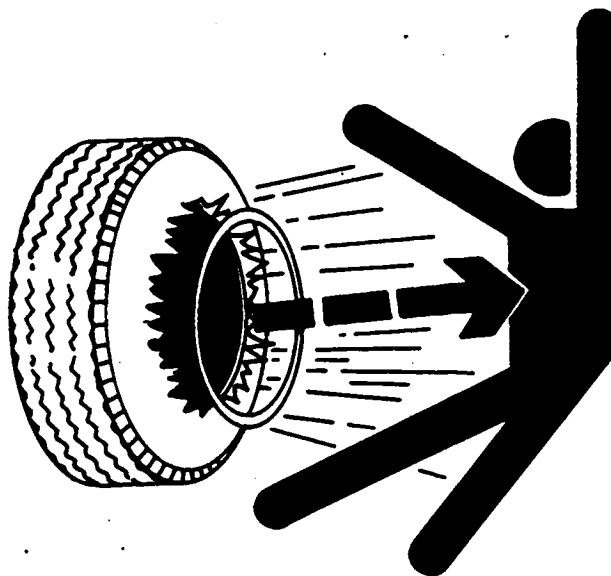

TS211 -UN-23AUG88

DX,RIM -19-24AUG90-1/1


## Avoid Harmful Asbestos Dust

Avoid breathing dust that may be generated when handling components containing asbestos fibers. Inhaled asbestos fibers may cause lung cancer.

Components in products that may contain asbestos fibers are brake pads, brake band and lining assemblies, clutch plates, and some gaskets. The asbestos used in these components is usually found in a resin or sealed in some way. Normal handling is not hazardous as long as airborne dust containing asbestos is not generated.

Avoid creating dust. Never use compressed air for cleaning. Avoid brushing or grinding material containing asbestos. When servicing, wear an approved respirator. A special vacuum cleaner is recommended to clean asbestos. If not available, apply a mist of oil or water on the material containing asbestos.

Keep bystanders away from the area.

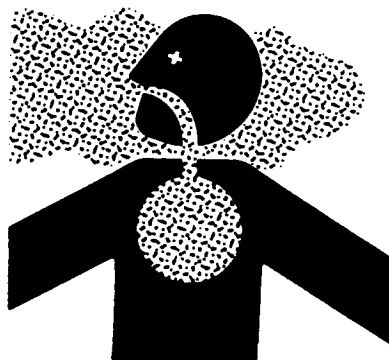

TS220 -UN-23AUG88

DX,DUST -19-15MAR91-1/1

### Avoid Heating Near Pressurized Fluid Lines

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



TS953 -UN-15MAY90

DX,TORCH -19-03MAR93-1/1

### Remove Paint Before Welding or Heating


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

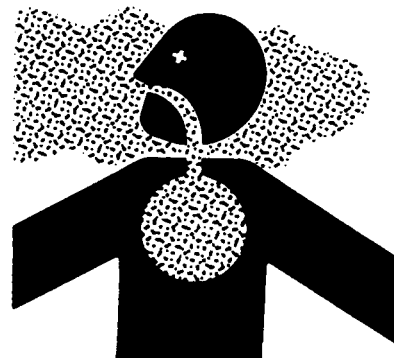

TS220 -UN-23AUG88

DX,PAINT -19-03MAR93-1/1

10  
05  
10

### Use Proper Tools

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards.

Use power tools only to loosen threaded parts and fasteners.

For loosening and tightening hardware, use the correct size tools. DO NOT use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches.

Use only service parts meeting John Deere specifications.



TS779 -UN-08NOV89

DX,REPAIR -19-17FEB99-1/1

### Dispose of Waste Properly


Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

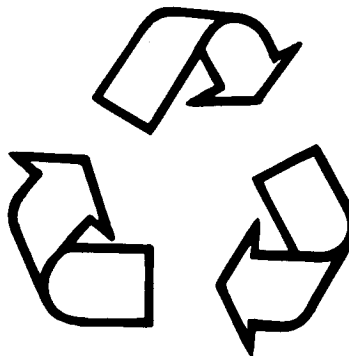

TS1133 -UN-26NOV90

DX,DRAIN -19-03MAR93-1/1

## Live With Safety

Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.



DX,LIVE -19-25SEP92-1/1

TS231 -19-07OCT88

10  
05  
11



**Machine Specifications—5210 and 5310**

*NOTE: Specifications and design subject to change without notice.*

**5210 Tractor**

| Item              | Measurement                            | Specification                       |
|-------------------|----------------------------------------|-------------------------------------|
| Engine            | Make                                   | John Deere                          |
|                   | Type                                   | Diesel                              |
|                   | Model                                  | CD3029DLV50                         |
|                   | Aspiration                             | Natural                             |
|                   | Horsepower                             | 40 kW (53 hp)                       |
|                   | Rated Engine Speed                     | 2400 rpm                            |
|                   | Operating Range                        | 1600—2400 rpm                       |
|                   | Number of Cylinders                    | 3                                   |
|                   | Displacement                           | 2.9 L (179 cu in.)                  |
|                   | Bore and Stroke                        | 106 x 110 mm (4.19 x 4.33 in.)      |
|                   | Compression Ratio                      | 17.8:1                              |
|                   | Fast Idle                              | 2625 ± 25 rpm                       |
|                   | Slow Idle                              | 825 ± 25 rpm                        |
|                   | Start Aid                              | Air heater                          |
|                   | Firing Order                           | 1-2-3                               |
|                   | Timing                                 | 18° BTDC                            |
|                   | Lubrication                            | Pressurized                         |
| Cooling           | Liquid cooled                          |                                     |
| Air Cleaner       | Dry type w/safety element              |                                     |
| Engine Shutoff    | Key switch                             |                                     |
| Fuel System       | Type                                   | Direct injection                    |
|                   | Injection Pump Type                    | Rotary w/electric shutoff           |
| Electrical System | Type                                   | 12 Volt                             |
|                   | Battery Size                           | 700 cold cranking amps at -18° C    |
|                   | Alternator Without Cab                 | 40 amp                              |
|                   | Alternator With Cab                    | 60 amp                              |
| Drive Train       | Transmission Type                      | CollarShift (standard)              |
|                   |                                        | SyncShuttle™ (optional)             |
|                   | Number of Speeds                       | PowrReverser™ (optional)            |
|                   |                                        | 9 forward, 3 reverse (SyncShuttle™) |
| Final Drive       | 12 forward, 12 reverse (PowrReverser™) |                                     |
|                   | Planetary                              |                                     |
| Clutch            | Dual, dry                              |                                     |
|                   | Multi-disk, wet (PowrReverser™)        |                                     |

Continued on next page

CED,OUO1085,9 -19-03APR02-1/6

*General Specifications*

10  
10  
2

| Item                  | Measurement                                                                                                                                                             | Specification                                                                                                                                             |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Steering/Brakes       | Steering<br>Brakes                                                                                                                                                      | Hydrostatic power<br>Wet disk<br>Self-equalizing<br>Self-adjusting                                                                                        |
| Hydraulic System      | Type<br>Working Pressure<br><br>Pump Type<br>Capacity<br>Hitch Lift Capacity at 610 mm (24 in.) Behind Hitch Balls<br>Lift Control Type                                 | Open Center<br>18995—19700 kPa<br>(190—197 bar)<br>(2755—2855 psi)<br>Tandem gear<br>(68.8 L/min 18.2 gpm)<br>1530 kg (3374 lb)<br><br>Position and depth |
| Rear PTO <sup>1</sup> | Type<br>Horsepower (Standard Mode)<br>Speed (540 Standard Mode) @ 2400 rpm Engine Speed<br>Speed (540E Economy Mode) @ 1700 rpm Engine Speed                            | Fully independent<br>34 kW (45 hp)<br>540 rpm<br>540 rpm                                                                                                  |
| Capacities            | Fuel Tank (Open Station)<br>Fuel Tank (Cab Tractors)<br>Cooling System<br>Engine Crankcase w/Filter<br>Hydraulic System<br>MFWD Wheel Hubs<br>MFWD Differential Housing | 68 L (18 U.S. gal)<br>83 L (22 U.S. gal)<br>9.5 L (10 U.S. qt)<br>8.5 L (9 U.S. qt)<br>38 L (10 U.S. gal)<br>0.6 L (0.63 U.S. qt)<br>5 L (5.3 U.S. qt)    |

<sup>1</sup>540E Economy Mode available only on SyncSuttle™ Transmission.

Continued on next page

CED.OUO1085.9 -19-03APR02-2/6

*General Specifications*

10  
10  
3

| <b>Item</b>                                          | <b>Measurement</b>                                             | <b>Specification</b>        |
|------------------------------------------------------|----------------------------------------------------------------|-----------------------------|
| Tires (Standard Equipment)                           | 2WD Front                                                      | 6.50—16 6PR F2              |
|                                                      | 2WD Rear                                                       | 13.6—28 4PR R1              |
|                                                      | MFWD Front                                                     | 8.3—24 4PR R1               |
|                                                      | MFWD Rear                                                      | 13.6—28 4PR R1              |
| Overall Dimensions (Standard Equipment) <sup>2</sup> | Drawbar Ground Clearance                                       | 364 mm (14.3 in.)           |
|                                                      | Front Axle Ground Clearance (2WD)                              | 478 mm (19 in.)             |
|                                                      | Front Axle Ground Clearance (MFWD)                             | 430 mm (17 in.)             |
|                                                      | Overall Length without Hitch and Drawbar                       | 3150 mm (124 in.)           |
|                                                      | Overall Width (Maximum)                                        | 2402 mm (94.6 in.)          |
|                                                      | Height to Top of Steering Wheel                                | 1600 mm (63 in.)            |
|                                                      | Height to Top of ROPS (Add 4 Inches if Equipped with a Canopy) | 2254 mm (88.7 in.) extended |
|                                                      |                                                                | 1948 mm (76.7 in.) folded   |
|                                                      | Height to Top of Cab from Center Line of Rear Axle             | 1844 mm (72.6 in.)          |
|                                                      | Approximate Weight (2WD)                                       | 1982 kg (4370 lb)           |
| Approximate Weight (MFWD)                            | 2145 kg (4730 lb)                                              |                             |

<sup>2</sup>Weights will vary slightly with optional tires. Add 1000 lbs. to weight of tractor if equipped with a cab.

Continued on next page

CED,OUO1085,9 -19-03APR02-3/6

General Specifications

10  
10  
4

**5310 Tractor**

| Item              | Measurement               | Specification                                                                    |
|-------------------|---------------------------|----------------------------------------------------------------------------------|
| Engine            | Make                      | John Deere                                                                       |
|                   | Type                      | Diesel                                                                           |
|                   | Model                     | CD3029TLV50                                                                      |
|                   | Aspiration                | Turbocharged                                                                     |
|                   | Horsepower                | 48 kW (64 hp)                                                                    |
|                   | Rated Engine Speed        | 2400 rpm                                                                         |
|                   | Operating Range           | 1600—2400 rpm                                                                    |
|                   | Number of Cylinders       | 3                                                                                |
|                   | Displacement              | 2.9 L (179 cu in.)                                                               |
|                   | Bore and Stroke           | 106 x 110 mm (4.19 x 4.33 in.)                                                   |
|                   | Compression Ratio         | 17.8:1                                                                           |
|                   | Fast Idle                 | 2625 ± 25 rpm                                                                    |
|                   | Slow Idle                 | 825 ± 25 rpm                                                                     |
|                   | Start Aid                 | Air heater                                                                       |
|                   | Firing Order              | 1-2-3                                                                            |
|                   | Timing                    | 18° BTDC                                                                         |
|                   | Lubrication               | Pressurized                                                                      |
| Cooling           | Liquid cooled             |                                                                                  |
| Air Cleaner       | Dry type w/safety element |                                                                                  |
| Engine Shutoff    | Key switch                |                                                                                  |
| Fuel System       | Type                      | Direct injection                                                                 |
|                   | Injection Pump Type       | Rotary w/electric shutoff                                                        |
| Electrical System | Type                      | 12 volt                                                                          |
|                   | Battery Size              | 700 cold cranking amps at -18° C                                                 |
|                   | Alternator Without Cab    | 40 amp                                                                           |
|                   | Alternator With Cab       | 60 amp                                                                           |
| Drive Train       | Transmission Type         | CollarShift (standard)<br>SyncShuttle™ (optional)<br>PowrReverser™ (optional)    |
|                   | Number of Speeds          | 9 forward, 3 reverse (SyncShuttle™)<br>12 forward, 12 reverse<br>(PowrReverser™) |
|                   | Final Drive               | Planetary                                                                        |
|                   | Clutch                    | Dual, dry<br>Multi-disk, wet (PowrReverser™)                                     |
| Steering/Brakes   | Steering                  | Hydrostatic power                                                                |
|                   | Brakes                    | Wet disk<br>Self-equalizing<br>Self-adjusting                                    |

Continued on next page

CED,OUO1085.9 -19-03APR02-4/6

*General Specifications*

10  
10  
5

| Item                  | Measurement                                               | Specification                                         |
|-----------------------|-----------------------------------------------------------|-------------------------------------------------------|
| Hydraulic System      | Type                                                      | Open center                                           |
|                       | Working Pressure                                          | 18 995—19 700 kPa<br>(190—197 bar)<br>(2755—2855 psi) |
|                       | Pump Type                                                 | Tandem gear                                           |
|                       | Capacity                                                  | 68.8 L/min (18.2 gpm)                                 |
|                       | Hitch Lift Capacity at 610 mm (24 in.) Behind Hitch Balls | 1530 kg (3374 lb)                                     |
|                       | Lift Control Type                                         | Position and depth                                    |
| Rear PTO <sup>3</sup> | Type                                                      | Fully independent                                     |
|                       | Horsepower (Standard Mode)                                | 41 kW (55 hp)                                         |
|                       | Speed (540 Standard Mode) @ 2400 rpm Engine Speed         | 540 rpm                                               |
|                       | Speed (540E Economy Mode) @ 1700 rpm Engine Speed         | 540 rpm                                               |
|                       |                                                           |                                                       |
| Capacities            | Fuel Tank (Open Station)                                  | 68 L (18 U.S. gal)                                    |
|                       | Fuel Tank (Cab Tractors)                                  | 83 L (22 U.S. gal)                                    |
|                       | Cooling System                                            | 9.5 L (10 U.S. qt)                                    |
|                       | Engine Crankcase w/Filter                                 | 8.5 L (9 U.S. qt)                                     |
|                       | Hydraulic System                                          | 38 L (10 U.S. gal)                                    |
|                       | MFWD Wheel Hubs                                           | 0.6 L (0.63 U.S. qt)                                  |
|                       | MFWD Differential Housing                                 | 5 L (5.3 U.S. qt)                                     |

<sup>3</sup>540E Economy Mode available only on SyncShuttle™ Transmission.

Continued on next page

CED.OUO1085.9 -19-03APR02-5/6

*General Specifications*

10  
10  
6

| Item                                                 | Measurement                                                                   | Specification               |
|------------------------------------------------------|-------------------------------------------------------------------------------|-----------------------------|
| Tires (Standard Equipment)                           | 2WD Front                                                                     | 7.50—16 6PR F2              |
|                                                      | 2WD Rear                                                                      | 14.9—28 6PR R1              |
|                                                      | MFWD Front                                                                    | 9.5—24 4PR R1               |
|                                                      | MFWD Rear                                                                     | 14.9—28 6PR R1              |
| Overall Dimensions (Standard Equipment) <sup>2</sup> | Drawbar Ground Clearance                                                      | 364 mm (14.3 in.)           |
|                                                      | Front Axle Ground Clearance (2WD)                                             | 478 mm (19 in.)             |
|                                                      | Front Axle Ground Clearance (MFWD)                                            | 430 mm (17 in.)             |
|                                                      | Overall Length without Hitch and Drawbar                                      | 3150 mm (124 in.)           |
|                                                      | Overall Width (Maximum)                                                       | 2402 mm (94.6 in.)          |
|                                                      | Height to Top of Steering Wheel                                               | 1625 mm (64 in.)            |
|                                                      | Height to Top of ROPS (Add 4 Inches to Top of ROPS if Equipped with a Canopy) | 2254 mm (88.7 in.) extended |
|                                                      |                                                                               | 1973 mm (77.7 in.) folded   |
|                                                      | Height to Top of Cab from Center Line of Rear Axle                            | 1844 mm (72.6 in.)          |
|                                                      | Approximate Weight (2WD)                                                      | 2064 kg (4550 lb)           |
| Approximate Weight (MFWD)                            | 2250 kg (4960 lb)                                                             |                             |

<sup>2</sup>Weights will vary slightly with optional tires. Add 1000 lbs. to weight of tractor if equipped with a cab.

CED,OUO1085.9 -19-03APR02-6/6

### Travel Speeds—5210 and 5310

| Item                                                                                                                | Measurement | Specification        |
|---------------------------------------------------------------------------------------------------------------------|-------------|----------------------|
| Travel Speeds for CollarShift or SyncShuttle™ Units at Full Engine RPM with 14.9—28 R1 Rear Tire Types <sup>1</sup> |             |                      |
| Creeper-1 Gear in Forward                                                                                           | Speed       | 0.3 km/h (0.2 mph)   |
| Creeper-2 Gear in Forward                                                                                           | Speed       | 0.5 km/h (0.3 mph)   |
| Creeper-3 Gear in Forward                                                                                           | Speed       | 0.7 km/h (0.4 mph)   |
| A-1st Gear in Forward                                                                                               | Speed       | 2.0 km/h (1.2 mph)   |
| A-2nd Gear in Forward                                                                                               | Speed       | 2.1 km/h (1.3 mph)   |
| A-3rd Gear in Forward                                                                                               | Speed       | 4.0 km/h (2.5 mph)   |
| B-1st Gear in Forward                                                                                               | Speed       | 4.7 km/h (2.9 mph)   |
| B-2nd Gear in Forward                                                                                               | Speed       | 6.7 km/h (4.2 mph)   |
| B-3rd Gear in Forward                                                                                               | Speed       | 9.2 km/h (5.7 mph)   |
| C-1st Gear in Forward                                                                                               | Speed       | 12.8 km/h (7.9 mph)  |
| C-2nd Gear in Forward                                                                                               | Speed       | 18.4 km/h (11.5 mph) |
| C-3rd Gear in Forward                                                                                               | Speed       | 25.1 km/h (15.6 mph) |
| Creeper-R Gear in Reverse                                                                                           | Speed       | 0.6 km/h (0.34 mph)  |
| Reverse-1st Gear                                                                                                    | Speed       | 3.4 km/h (2.1 mph)   |
| Reverse-2nd Gear                                                                                                    | Speed       | 7.8 km/h (4.8 mph)   |
| Reverse-3rd Gear                                                                                                    | Speed       | 21.3 km/h (13.2 mph) |

<sup>1</sup>Travel speeds will vary with optional rear tires. Creeper assembly is optional.

General Specifications

10  
10  
8

| Item                                                                                                         | Measurement | Specification        |
|--------------------------------------------------------------------------------------------------------------|-------------|----------------------|
| Travel Speeds for PowrReverser™<br>Units at Full Engine RPM with 16.9—<br>30 R1 Rear Tire Types <sup>1</sup> |             |                      |
| Creeper-1 Gear in Forward                                                                                    | Speed       | 0.24 km/h (0.15 mph) |
| Creeper-2 Gear in Forward                                                                                    | Speed       | 0.31 km/h (0.19 mph) |
| Creeper-3 Gear in Forward                                                                                    | Speed       | 0.40 km/h (0.25 mph) |
| Creeper-4 Gear in Forward                                                                                    | Speed       | 0.54 km/h (0.34 mph) |
| A-1 Gear in Forward                                                                                          | Speed       | 1.49 km/h (0.93 mph) |
| A-2 Gear in Forward                                                                                          | Speed       | 1.87 km/h (1.16 mph) |
| A-3 Gear in Forward                                                                                          | Speed       | 2.42 km/h (1.50 mph) |
| A-4 Gear in Forward                                                                                          | Speed       | 2.87 km/h (1.79 mph) |
| B-1 Gear in Forward                                                                                          | Speed       | 4.33 km/h (2.69 mph) |
| B-2 Gear in Forward                                                                                          | Speed       | 5.42 km/h (3.37 mph) |
| B-3 Gear in Forward                                                                                          | Speed       | 7.00 km/h (4.34 mph) |
| B-4 Gear in Forward                                                                                          | Speed       | 9.56 km/h (5.94 mph) |
| C-1 Gear in Forward                                                                                          | Speed       | 12.2 km/h (7.61 mph) |
| C-2 Gear in Forward                                                                                          | Speed       | 15.3 km/h (9.51 mph) |
| C-3 Gear in Forward                                                                                          | Speed       | 19.8 km/h (12.3 mph) |
| C-4 Gear in Forward                                                                                          | Speed       | 27.0 km/h (16.8 mph) |
| Creeper-1 Gear in Reverse                                                                                    | Speed       | 0.28 km/h (0.18 mph) |
| Creeper-2 Gear in Reverse                                                                                    | Speed       | 0.35 km/h (0.22 mph) |
| Creeper-3 Gear in Reverse                                                                                    | Speed       | 0.46 km/h (0.28 mph) |
| Creeper-4 Gear in Reverse                                                                                    | Speed       | 0.62 km/h (0.39 mph) |

<sup>1</sup>Travel speeds will vary with optional rear tires. Creeper assembly is optional.

Continued on next page

OUO1080,0000287 -19-23JUL02-2/3

General Specifications

10  
10  
9

| Item                | Measurement | Specification        |
|---------------------|-------------|----------------------|
| A-1 Gear in Reverse | Speed       | 1.72 km/h (1.07 mph) |
| A-2 Gear in Reverse | Speed       | 2.16 km/h (1.34 mph) |
| A-3 Gear in Reverse | Speed       | 2.79 km/h (1.74 mph) |
| A-4 Gear in Reverse | Speed       | 3.32 km/h (2.07 mph) |
| B-1 Gear in Reverse | Speed       | 5.01 km/h (3.11 mph) |
| B-2 Gear in Reverse | Speed       | 6.26 km/h (3.89 mph) |
| B-3 Gear in Reverse | Speed       | 8.10 km/h (5.04 mph) |
| B-4 Gear in Reverse | Speed       | 11.0 km/h (6.87 mph) |
| C-1 Gear in Reverse | Speed       | 14.2 km/h (8.80 mph) |
| C-2 Gear in Reverse | Speed       | 17.7 km/h (11.0 mph) |
| C-3 Gear in Reverse | Speed       | 22.9 km/h (14.2 mph) |
| C-4 Gear in Reverse | Speed       | 31.2 km/h (19.4 mph) |

OQO1080.0000287 -19-23JUL02-3/3

## Machine Specifications—5410

### 5410 Tractor

| Item              | Measurement               | Specification                                                                 |
|-------------------|---------------------------|-------------------------------------------------------------------------------|
| Engine            | Make                      | John Deere                                                                    |
|                   | Type                      | Diesel                                                                        |
|                   | Model                     | CD4045DLV50                                                                   |
|                   | Aspiration                | Natural                                                                       |
|                   | Horsepower                | 48 kW (65 hp)                                                                 |
|                   | Rated Engine Speed        | 2400 rpm                                                                      |
|                   | Number of Cylinders       | 4                                                                             |
|                   | Displacement              | 4.5 L (274 cu in.)                                                            |
|                   | Bore and Stroke           | 106 x 127 mm (4.19 x 5.00 in.)                                                |
|                   | Compression Ratio         | 17.6:1                                                                        |
|                   | Fast Idle                 | 2625 ± 25 rpm                                                                 |
|                   | Slow Idle                 | 825 ± 25 rpm                                                                  |
|                   | Start Aid                 | Air heater                                                                    |
|                   | Firing Order              | 1-3-4-2                                                                       |
|                   | Timing                    | 17° BTDC                                                                      |
|                   | Lubrication               | Pressurized                                                                   |
|                   | Cooling                   | Liquid cooled                                                                 |
| Air Cleaner       | Dry type w/safety element |                                                                               |
| Engine Shutoff    | Key switch                |                                                                               |
| Fuel System       | Type                      | Direct injection                                                              |
|                   | Injection Pump Type       | Rotary w/electric shutoff                                                     |
| Electrical System | Type                      | 12 volt                                                                       |
|                   | Battery Size              | 700 cold cranking amps at -18°C                                               |
|                   | Alternator                | 40 amp without cab<br>65 amp with cab                                         |
| Drive Train       | Transmission Type         | CollarShift                                                                   |
|                   |                           | SyncShuttle™ (optional)<br>PowrReverser™ (optional)                           |
|                   | Number of Speeds          | 9 Forward, 3 Reverse (SyncShuttle™)<br>12 Forward, 12 Reverse (PowrReverser™) |
|                   |                           | Final Drive Clutch                                                            |