

Product: John Deere 7500/7700/8500/8700/8800,7500/8500 E-Cut Hybrid Lightweight Fairway Mower Service Repair Technical
Full Download: <https://www.bobmanualstore.com/downloads/john-deere-7500-7700-8500-8700-88007500-8500-e-cut-hybrid-lightweight-fairway-mower-service-repair-technical-manual/>

JOHN DEERE
WORLDWIDE COMMERCIAL & CONSUMER
EQUIPMENT DIVISION

Lightweight Fairway Mower
7500, 7700, 8500, 8700, 8800 (SN 020001-)
7500 E-Cut Hybrid and 8500 E-Cut Hybrid
(SN 010001-)

TM107919 MAY 2009

TECHNICAL MANUAL



JOHN DEERE

North American Version
Litho In U.s.a.

Sample manual. Download All 682 pages at:

<https://www.bobmanualstore.com/downloads/john-deere-7500-7700-8500-8700-88007500-8500-e-cut-hybrid-lightweight-fairway-mower-service-repair-technical-manual/>

Product: John Deere 7500/7700/8500/8700/8800,7500/8500 E-Cut Hybrid Lightweight Fairway Mower Service Repair Technical Manual
Full Download: <https://www.bobmanualstore.com/downloads/john-deere-7500-7700-8500-8700-88007500-8500-e-cut-hybrid-lightweight-fairway-mower-service-repair-technical-manual/>

Sample manual. Download All 682 pages at:
<https://www.bobmanualstore.com/downloads/john-deere-7500-7700-8500-8700-88007500-8500-e-cut-hybrid-lightweight-fairway-mower-service-repair-technical-manual/>

INTRODUCTION

Manual Description

This technical manual is written for an experienced technician and contains sections that are specifically for this product. It is a part of a total product support program.

The manual is organized so that all the information on a particular system is kept together. The order of grouping is as follows:

- Table of Contents
- Specifications and Information
- Identification Numbers
- Tools and Materials
- Component Location
- Schematics and Harnesses
- Theory of Operation
- Operation and Diagnostics
- Diagnostics
- Tests and Adjustments
- Repair
- Other

Note: *Depending on the particular section or system being covered, not all of the above groups may be used.*

The bleed tabs for the pages of each section will align with the sections listed on this page. Page numbering is consecutive from the beginning of the Safety section through the last section.

We appreciate your input on this manual. If you find any errors or want to comment on the layout of the manual please contact us.

Safety

Specifications and Information

Engine

Electrical

Power Train

Hydraulics

Steering

Brakes

Attachments

All information, illustrations and specifications in this manual are based on the latest information at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 2009
Deere & Co.
John Deere Worldwide Commercial and
Consumer Equipment Division
All rights reserved
Previous Editions
COPYRIGHT©

INTRODUCTION

SAFETY

Recognize Safety Information



MIF

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.


Follow recommended precautions and safe servicing practices.

Understand Signal Words

A signal word - DANGER, WARNING, or CAUTION - is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

Replace Safety Signs

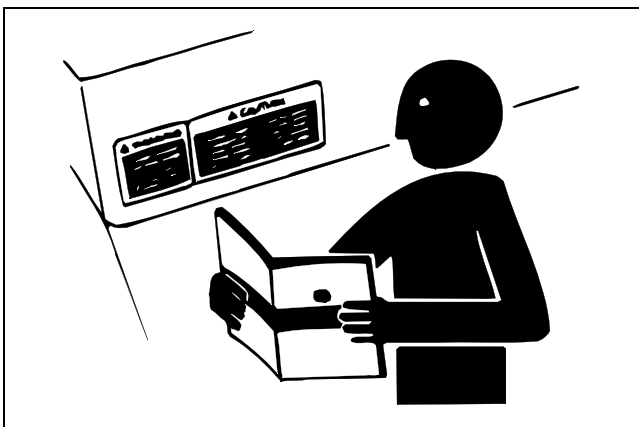


MIF

Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.

Handle Fluids Safely - Avoid Fires

Be Prepared For Emergencies

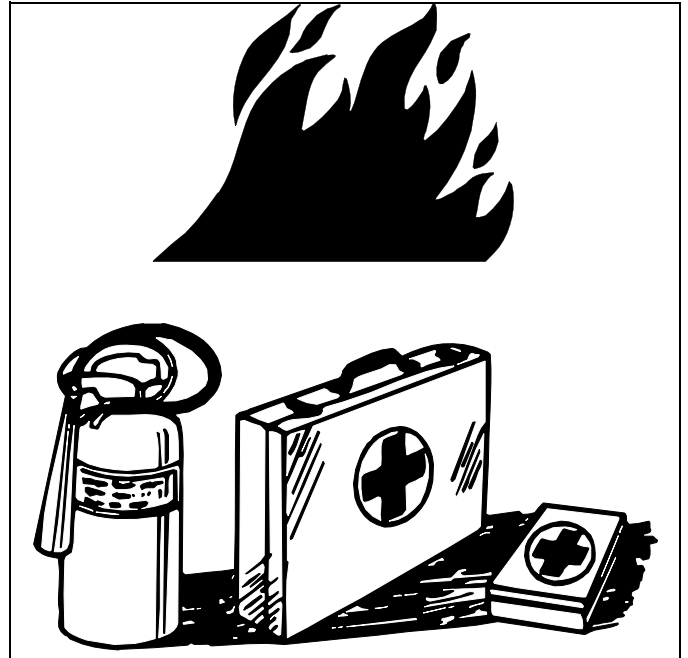

MIF

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.


Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

SAFETY

Use Care in Handling and Servicing Batteries

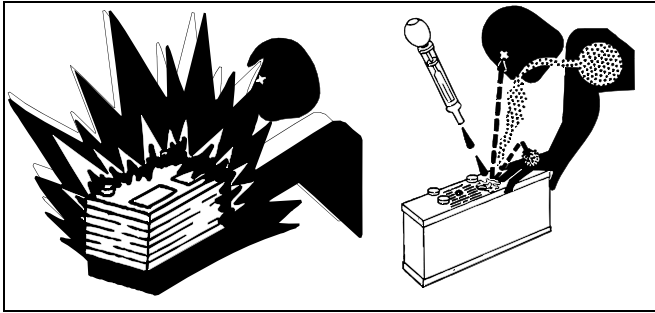

MIF

Prevent Battery Explosions

- Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.
- Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.
- Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).

Prevent Acid Burns

- Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid acid burns by:

1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Using proper jump start procedure.

If you spill acid on yourself:

6. Flush your skin with water.
7. Apply baking soda or lime to help neutralize the acid.
8. Flush your eyes with water for 10-15 minutes.
9. Get medical attention immediately.

If acid is swallowed:

10. Drink large amounts of water or milk.
11. Then drink milk of magnesia, beaten eggs, or vegetable oil.
12. Get medical attention immediately.

Use Care Around High-Pressure Fluid Lines

Avoid High-Pressure Fluids



MIF

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid injury from escaping fluid under pressure by stopping the engine and relieving pressure in the system before disconnecting or connecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

Avoid Heating Near Pressurized Fluid Lines




MIF

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.

SAFETY

Use Safe Service Procedures

Wear Protective Clothing

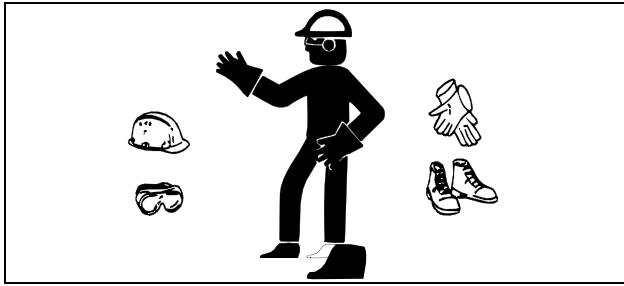


MIF

Wear close-fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing. Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

Service Machines Safely

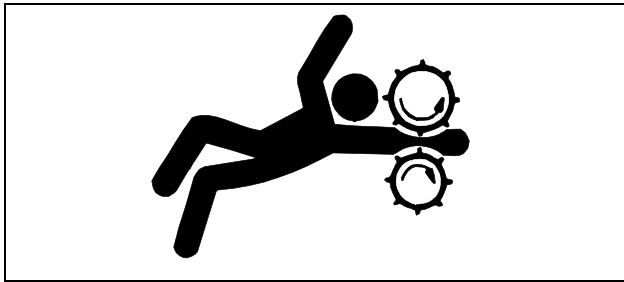

MIF


Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

Use Proper Tools

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards. Use power tools only to loosen threaded parts and fasteners. For loosening and tightening hardware, use the correct size tools. **DO NOT** use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches. Use only service parts meeting John Deere specifications.

Park Machine Safely

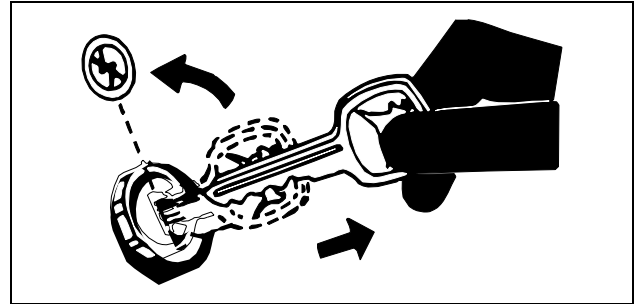


MIF

Before working on the machine:

1. Lower all equipment to the ground.
2. Stop the engine and remove the key.
3. Disconnect the battery ground strap.
4. Hang a "DO NOT OPERATE" tag in operator station.

Support Machine Properly and Use Proper Lifting Equipment

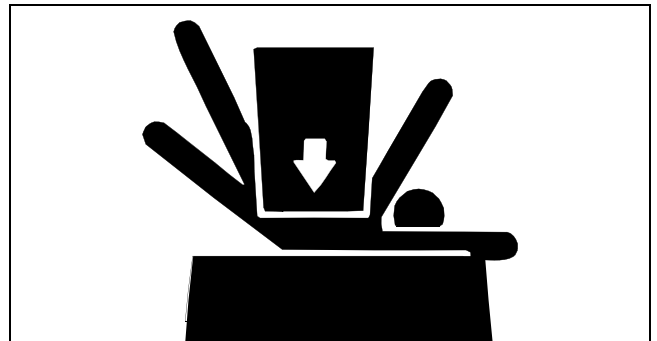

MIF

If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

Lifting heavy components incorrectly can cause severe injury or machine damage. Follow recommended procedure for removal and installation of components in the manual.

Work in Clean Area

Before starting a job:

1. Clean work area and machine.
2. Make sure you have all necessary tools to do your job.
3. Have the right parts on hand.
4. Read all instructions thoroughly; do not attempt shortcuts.

SAFETY


Using High-Pressure Washers

Directing pressurized water at electronic/electrical components or connectors, bearings, hydraulic seals, fuel injection pumps or other sensitive parts and components may cause product malfunctions. Reduce pressure and spray at a 45 to 90 degree angle.

Illuminate Work Area Safely

Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.

Work in Ventilated Area

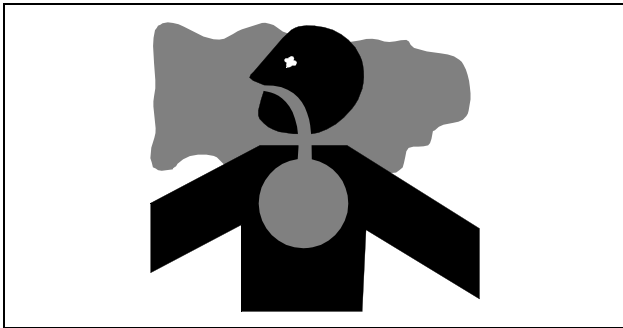

MIF

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

WARNING: California Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Gasoline engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

Remove Paint Before Welding or Heating

Avoid potentially toxic fumes and dust. Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch. Do all work outside or in a well ventilated area. Dispose of paint and solvent properly. Remove paint before welding or heating: If you sand or grind paint, avoid breathing the dust. Wear an approved respirator. If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Avoid Harmful Asbestos Dust

Avoid breathing dust that may be generated when handling components containing asbestos fibers. Inhaled asbestos fibers may cause lung cancer.

Components in products that may contain asbestos fibers are brake pads, brake band and lining assemblies, clutch plates, and some gaskets. The asbestos used in these components is usually found in a resin or sealed in some way. Normal handling is not hazardous as long as airborne dust containing asbestos is not generated.

Avoid creating dust. Never use compressed air for cleaning. Avoid brushing or grinding material containing asbestos. When servicing, wear an approved respirator. A special vacuum cleaner is recommended to clean asbestos. If not available, apply a mist of oil or water on the material containing asbestos. Keep bystanders away from the area.

Service Tires Safely



MIF

Explosive separation of a tire and rim parts can cause serious injury or death.


Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job. Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

SAFETY


Avoid Injury from Rotating Blades and Drive Shafts

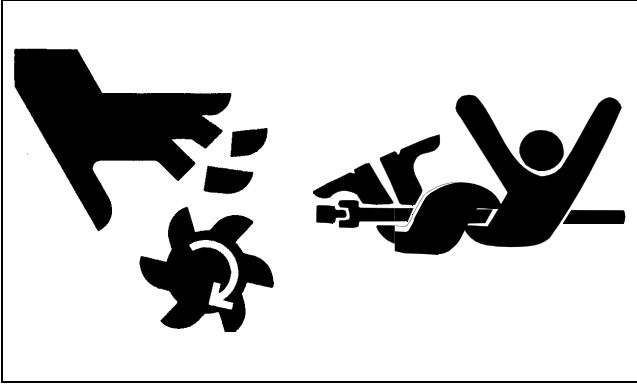

TS283 MIF

Keep hands and feet away while machine is running. Shut off power to service, lubricate or remove mower blades or drive shafts.

Service Cooling System Safely

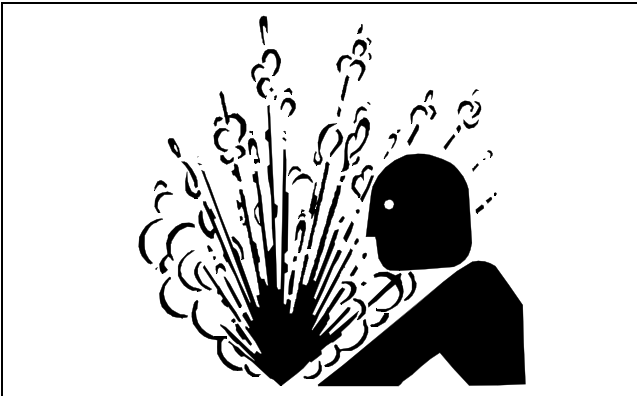


MIF

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off machine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen the cap to first stop to relieve the pressure before removing completely.

Handle Chemical Products Safely

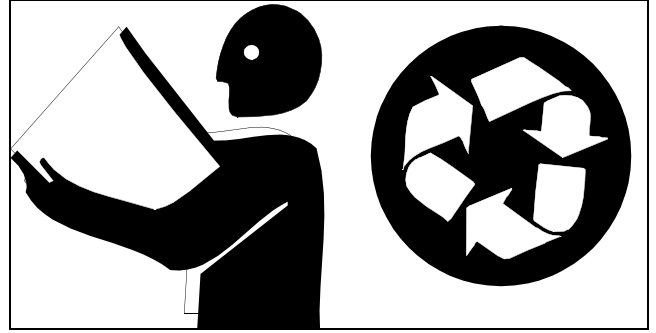

MIF

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques. Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

Dispose of Waste Properly

Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment includes such items as oil, fuel, coolant, brake fluid, filters, and batteries. Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them. Do not pour waste onto the ground, down a drain, or into any water source. Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

LIVE WITH SAFETY



MIF


Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.

SPECIFICATIONS AND INFORMATION TABLE OF CONTENTS

Table of Contents

General Information.....	9
Metric Fastener Torque Values	9
Inch Fastener Torque Values	10
Face Seal Fittings with Inch Stud Ends Torque	11
Face Seal Fittings with Metric Stud Ends Torque	12
O-Ring Face Seal Fittings	13
O-Ring Boss Fittings	13
Using Proper Fuel (Diesel) - North America ..	14
Diesel Fuel - Europe.....	14
Diesel Fuel Storage.....	15
4-Cycle Diesel Engine Oil - North America ..	15
4-Cycle Diesel Engine Oil - Europe.....	15
Transmission and Hydraulic Oil.....	16
Grease - North America	16
Grease - Europe.....	16
Alternative Lubricants.....	16
Synthetic Lubricants	17
Lubricant Storage	17
Mixing of Lubricants	17
Oil Filters	17
Diesel Engine Coolant - North America.....	17
Diesel Engine Coolant Drain Interval - North America	18
Diesel Engine Coolant - Europe	18
Diesel Engine Coolant Drain Interval - Europe.....	18
Identification Numbers.....	19
Serial Number Location.....	19
Machine Identification Number.....	19
Engine Serial Number	19
Cutting Unit Serial Numbers.....	19




 




SPECIFICATIONS AND INFORMATION TABLE OF CONTENTS

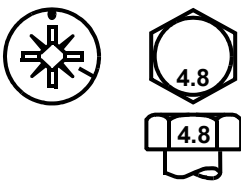

SPECIFICATIONS AND INFORMATION GENERAL INFORMATION

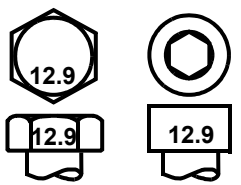General Information

Metric Fastener Torque Values

Property Class and Head Markings	4.8 	8.8 9.8 	10.9 	12.9 
Property Class and Nut Markings	5 	10 	10 	12 

MIF (TS1163)

	Class 4.8				Class 8.8 or 9.8				Class 10.9				Class 12.9			
	Lubricated ¹		Dry ^a		Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a	
SIZE	N•m	lb-ft	N•m	lb-ft	N•m	lb-ft	N•m	lb-ft	N•m	lb-ft	N•m	lb-ft	N•m	lb-ft	N•m	lb-ft
M6	4.8	3.5	6	4.5	9	6.5	11	8.5	13	9.5	17	12	15	11.5	19	14.5
M8	12	8.5	15	11	22	16	28	20	32	24	40	30	37	28	47	35
M10	23	17	29	21	43	32	55	40	63	47	80	60	75	55	95	70
M12	40	29	50	37	75	55	95	70	110	80	140	105	130	95	165	120
M14	63	47	80	60	120	88	150	110	175	130	225	165	205	150	260	109
M16	100	73	125	92	190	140	240	175	275	200	350	225	320	240	400	300
M18	135	100	175	125	260	195	330	250	375	275	475	350	440	325	560	410
M20	190	140	240	180	375	275	475	350	530	400	675	500	625	460	800	580
M22	260	190	330	250	510	375	650	475	725	540	925	675	850	625	1075	800
M24	330	250	425	310	650	475	825	600	925	675	1150	850	1075	800	1350	1000
M27	490	360	625	450	950	700	1200	875	1350	1000	1700	1250	1600	1150	2000	1500
M30	675	490	850	625	1300	950	1650	1200	1850	1350	2300	1700	2150	1600	2700	2000
M33	900	675	1150	850	1750	1300	2200	1650	2500	1850	3150	2350	2900	2150	3700	2750
M36	1150	850	1450	1075	2250	1650	2850	2100	3200	2350	4050	3000	3750	2750	4750	3500

¹ "Lubricated" means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings. "Dry" means plain or zinc plated (yellow dichromate - Specification JDS117) without any lubrication.

DO NOT use these hand torque values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only and include a ±10% variance factor. Check tightness of fasteners periodically. DO NOT use air powered wrenches.

Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical grade.

Fasteners should be replaced with the same class. Make sure fastener threads are clean and that you properly start

thread engagement. This will prevent them from failing when tightening.


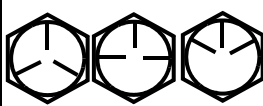
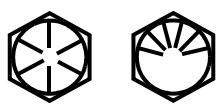





When bolt and nut combination fasteners are used, torque values should be applied to the NUT instead of the bolt head.

Tighten toothed or serrated-type lock nuts to the full torque value.

Reference: JDS-G200.

SPECIFICATIONS AND INFORMATION GENERAL INFORMATION

Inch Fastener Torque Values

SAE Grade and Head Markings	1 or 2 ¹ No Marks 	5 5.1 5.2 	8 8.2 
SAE Grade and Nut Markings	2 No Marks 	5  	8  

MIF (TS1162)

SIZE	Grade 1		Grade 2 ¹				Grade 5, 5.1 or 5.2				Grade 8 or 8.2					
	Lubricated ²		Dry ²		Lubricated ²		Dry ²		Lubricated ²		Dry ²		Lubricated ²		Dry ²	
	N•m	lb-ft	N•m	lb-ft	N•m	lb-ft	N•m	lb-ft	N•m	lb-ft	N•m	lb-ft	N•m	lb-ft	N•m	lb-ft
1/4	3.7	2.8	4.7	3.5	6	4.5	7.5	5.5	9.5	7	12	9	13.5	10	17	12.5
5/16	7.7	5.5	10	7	12	9	15	11	20	15	25	18	28	21	35	26
3/8	14	10	17	13	22	16	27	20	35	26	44	33	50	36	63	46
7/16	22	16	28	20	35	26	44	32	55	41	70	52	80	58	100	75
1/2	33	25	42	31	53	39	67	50	85	63	110	80	120	90	150	115
9/16	48	36	60	45	75	56	95	70	125	90	155	115	175	130	225	160
5/8	67	50	85	62	105	78	135	100	170	125	215	160	215	160	300	225
3/4	120	87	150	110	190	140	240	175	300	225	375	280	425	310	550	400
7/8	190	140	240	175	190	140	240	175	490	360	625	450	700	500	875	650
1	290	210	360	270	290	210	360	270	725	540	925	675	1050	750	1300	975
1-1/8	470	300	510	375	470	300	510	375	900	675	1150	850	1450	1075	1850	1350
1-1/4	570	425	725	530	570	425	725	530	1300	950	1650	1200	2050	1500	2600	1950
1-3/8	750	550	950	700	750	550	950	700	1700	1250	2150	1550	2700	2000	3400	2550
1-1/2	1000	725	1250	925	990	725	1250	930	2250	1650	2850	2100	3600	2650	4550	3350

1. "Grade 2" applies for hex cap screws (not hex bolts) up to 152 mm (6 in.) long. "Grade 1" applies for hex cap screws over 152 mm (6 in.) long, and for all other types of bolts and screws of any length.

2. "Lubricated" means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings. "Dry" means plain or zinc plated (yellow dichromate - Specification JDS117) without any lubrication.

DO NOT use these hand torque values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only and include a ±10% variance factor. Check tightness of fasteners periodically. DO NOT use air powered wrenches.

Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical grade.

Fasteners should be replaced with the same grade. Make sure fastener threads are clean and that you properly start

thread engagement. This will prevent them from failing when tightening.


When bolt and nut combination fasteners are used, torque values should be applied to the NUT instead of the bolt head.

Tighten toothed or serrated-type locknuts to the full torque value.

Reference: JDS-G200.

SPECIFICATIONS AND INFORMATION GENERAL INFORMATION

Face Seal Fittings with Inch Stud Ends Torque

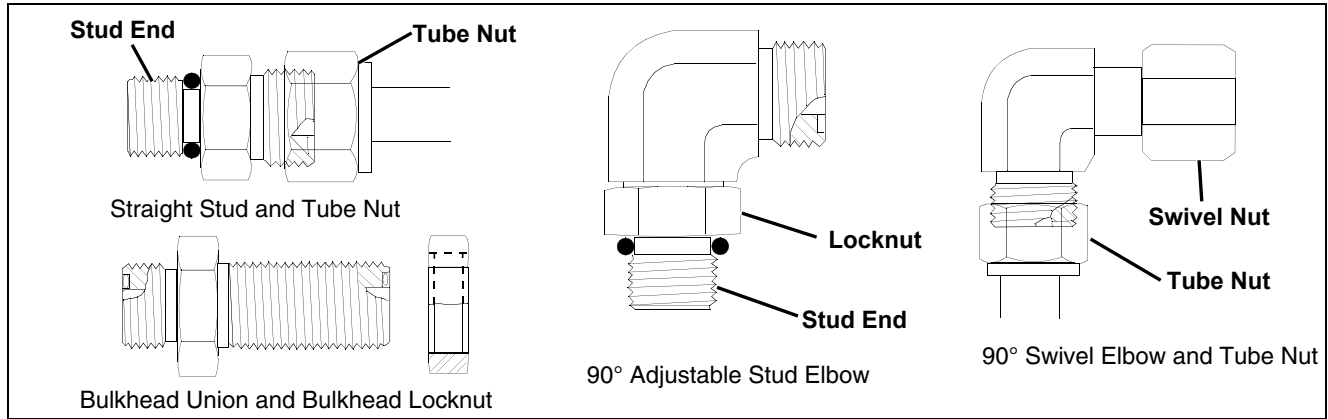


MIF

Nominal Tube OD/Hose ID				Face Seal Tube/Hose End					O-Ring Stud Ends		
Metric Tube OD	Inch Tube OD			Thread Size	Tube Nut/ Swivel Nut Torque		Bulkhead Locknut Torque		Thread Size	Straight Fitting or Locknut Torque	
	mm	Dash Size	in.		mm	in.	N•m	lb-ft		N•m	lb-ft
	-3	0.188	4.76						3/8-24	8	6
6	-4	0.250	6.35	9/16-18	16	12	12	9	7/16-20	12	9
8	-5	0.312	7.94						1/2-20	16	12
10	-6	0.375	9.52	11/16-16	24	18	24	18	9/16-18	24	18
12	-8	0.500	12.70	13/16-16	50	37	46	34	3/4-16	46	34
16	-10	0.625	15.88	1-14	69	51	62	46	7/8-14	62	46
	-12	0.750	19.05	1-3/16-12	102	75	102	75	1-1/16-12	102	75
22	-14	0.875	22.22	1-3/16-12	102	75	102	75	1-3/16-12	122	90
25	-16	1.000	25.40	1-7/16-12	142	105	142	105	1-5/16-12	142	105
32	-20	1.25	31.75	1-11/16-12	190	140	190	140	1-5/8-12	190	140
38	-24	1.50	38.10	2-12	217	160	217	160	1-7/8-12	217	160

Note: Torque tolerance is +15%, -20%.

SPECIFICATIONS AND INFORMATION GENERAL INFORMATION

Face Seal Fittings with Metric Stud Ends Torque

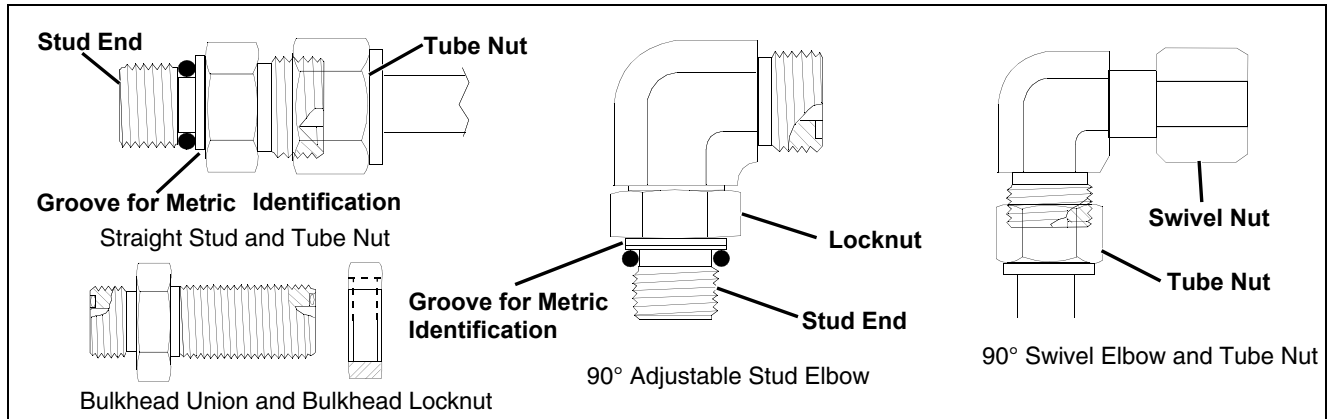


MIF

Nominal Tube OD/Hose ID				Face Seal Tube/Hose End						O-Ring Stud Ends, Straight Fitting or Locknut					
Metric Tube OD	Inch Tube OD			Thread Size	Hex Size	Tube Nut/ Swivel Nut Torque		Bulkhead Locknut Torque		Thread Size	Hex Size	Steel or Gray Iron Torque		Aluminum Torque	
	mm	Dash Size	in.			mm	in.	N•m	lb-ft			N•m	lb-ft	mm	mm
6	-4	0.250	6.35	9/16-18	17	16	12	12	9	M12x1.5	17	21	15.5	9	6.6
8	-5	0.312	7.94												
										M14x1.5	19	33	24	15	11
10	-6	0.375	9.52	11/16-16	22	24	18	24	18	M16x1.5	22	41	30	18	13
12	-8	0.500	12.70	13/16-16	24	50	37	46	34	M18x1.5	24	50	37	21	15
16	-10	0.625	15.88	1-14	30	69	51	62	46	M22x1.5	27	69	51	28	21
	-12	0.750	19.05	1-3/16-12	36	102	75	102	75	M27x2	32	102	75	46	34
22	-14	0.875	22.22	1-3/16-12	36	102	75	102	75	M30x2	36				
25	-16	1.000	25.40	1-7/16-12	41	142	105	142	105	M33x2	41	158	116	71	52
28										M38x2	46	176	130	79	58
32	-20	1.25	31.75	1-11/16-12	50	190	140	190	140	M42x2	50	190	140	85	63
38	-24	1.50	38.10	2-12	60	217	160	217	160	M48x2	55	217	160	98	72

Note: Torque tolerance is +15%, -20%.

SPECIFICATIONS AND INFORMATION GENERAL INFORMATION

O-Ring Face Seal Fittings

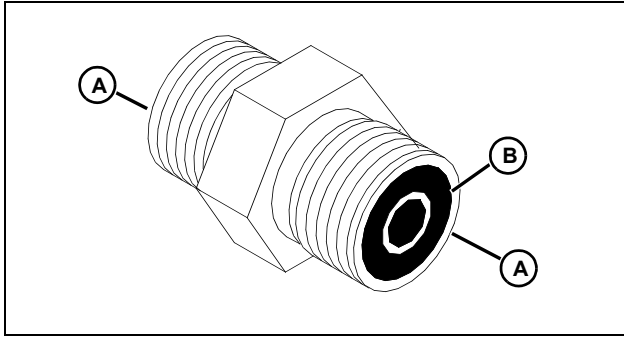


1. Inspect the fitting sealing surfaces (A). They must be free of dirt or defects.
2. Inspect the O-ring (B). It must be free of damage or defects.
3. Lubricate O-rings and install into groove using petroleum jelly to hold in place.
4. Push O-ring into the groove with plenty of petroleum jelly so O-ring is not displaced during assembly.
5. Index angle fittings and tighten by hand-pressing joint together to ensure O-ring remains in place.

Important: Avoid Damage! DO NOT allow hoses to twist when tightening fittings. Use two wrenches to tighten hose connections: one to hold the hose, and the other to tighten the swivel fitting.


6. Tighten fitting or nut to torque value shown on the chart per dash size stamped on the fitting.

O-Ring Boss Fittings

1. Inspect O-ring boss seat. It must be free of dirt and defects. If repeated leaks occur, inspect for defects with a magnifying glass. Some raised defects can be removed with a slip stone.

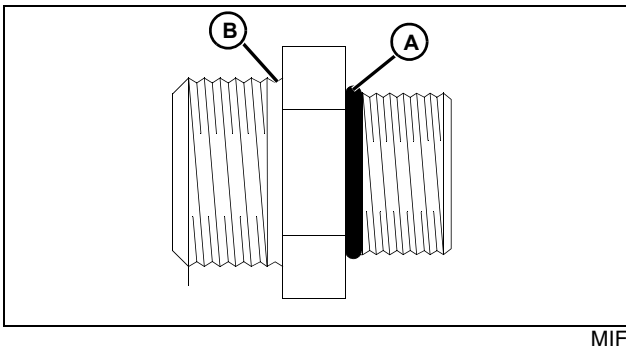

2. Put hydraulic oil or petroleum jelly on the O-ring (A). Place electrical tape over the threads to protect O-ring from nicks. Slide O-ring over the tape and into the groove (B) of fitting. Remove tape.

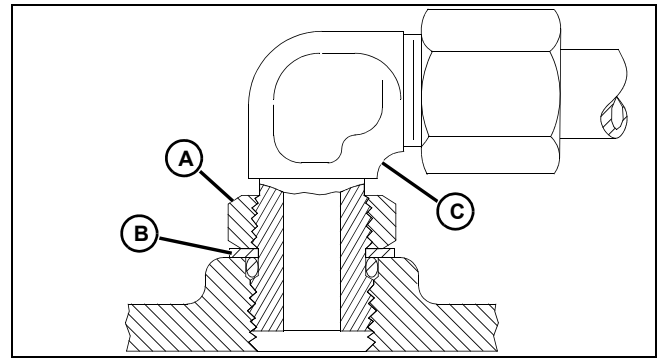

3. For angle fittings, loosen special nut (A) and push special washer (B) against threads so O-ring can be installed into the groove of fitting.
4. Turn fitting into the boss by hand until special washer or washer face (straight fitting) contacts boss face and O-ring is squeezed into its seat.
5. To position angle fittings (C), turn the fitting counter-clockwise a maximum of one turn.
6. Tighten straight fittings to torque value shown on chart. For angle fittings, tighten the special nut to value shown on the chart while holding body of fitting with a wrench.

Thread Size	Torque ¹		Number of Flats ²
	N•m	lb-ft	
3/8-24 UNF	8	6	2
7/16-20 UNF	12	9	2
1/2-20 UNF	16	12	2
9/16-18 UNF	24	18	2
3/4-16 UNF	46	34	2
7/8-14 UNF	62	46	1-1/2
1-1/16-12 UN	102	75	1
1-3/16-12 UN	122	90	1
1-5/16-12 UN	142	105	3/4
1-5/8-12 UN	190	140	3/4
1-7/8-12 UN	217	160	1/2

1. Torque tolerance is ± 10 percent.

2. To be used if a torque wrench cannot be used. After tightening fitting by hand, put a mark on nut or boss, then tighten special nut or straight fitting the number of flats shown.

SPECIFICATIONS AND INFORMATION GENERAL INFORMATION

Using Proper Fuel (Diesel) - North America

Use the proper diesel fuel to help prevent decreased engine performance and increased exhaust emissions. Failure to follow the fuel requirements listed below can void your engine warranty.

Contact your local fuel distributor for properties of the diesel fuel in your area.

In general, diesel fuels are blended to satisfy the low temperature requirements of the geographical area in which they are marketed.

Diesel fuels specified to EN 590 or ASTM D975 are recommended.

Required fuel properties

In all cases, the fuel shall meet the following properties:

Cetane number of 45 minimum. Cetane number greater than 50 is preferred, especially when temperatures are below -20°C (-4°F) or elevations above 1500 m (5000 ft).

Cold Filter Plugging Point (CFPP) below the expected low temperature OR **Cloud Point** at least 5°C (9°F) below the expected low temperature.

Fuel lubricity should pass a minimum load level of 3100 grams as measured by ASTM D6078 or maximum scar diameter of 0.45 mm as measured by ASTM D6079 or ISO 12156-1.

If a fuel of low or unknown lubricity is used, addition of John Deere PREMIUM DIESEL FUEL CONDITIONER at the specified concentration is recommended.

Sulfur content

- Diesel fuel quality and fuel sulfur content must comply with all existing emissions regulations for the area in which the engine operates.
- Sulfur content less than 0.05% (500 ppm) is recommended for best performance.
- Diesel fuel sulfur content greater than 0.5% (5000 ppm) should not be used.

Important: Avoid Damage! Do not mix diesel engine oil or any other type of lubricating oil with diesel fuel.

Handling and Storing Diesel Fuel



Caution: Avoid Injury! Handle fuel carefully. Do not fill the fuel tank when engine is running.

Do not smoke while you fill the fuel tank or service the fuel system.

Important: Avoid Damage! Do not use galvanized containers - diesel fuel stored in galvanized containers reacts with zinc coating in the container to form zinc flakes. If fuel contains water, a zinc gel will also form. The gel and flakes will quickly plug fuel filters and damage fuel injectors and fuel pumps.

- Fill fuel tank at end of each day's operation to prevent water condensation and freezing during cold weather.

Important: Avoid Damage! The fuel tank is vented through the filler cap. If a new cap is required, always replace it with an original vented cap.

- When fuel is stored for an extended period or if there is a slow turnover of fuel, add a fuel conditioner to stabilize the fuel and to prevent water condensation. Contact your fuel supplier for recommendations.

Diesel Fuel - Europe

In general, diesel fuels are blended to satisfy the low air temperature requirements of the geographical area in which they are sold.

In Europe, diesel fuel is usually specified to **EN590** and sold in five different classes or six different grades.

If diesel fuels being supplied in your area DO NOT meet any of the above specifications, use diesel fuels with the following equivalent properties:

- Cetane Number 40 (Min)

A cetane number greater than 50 is preferred, especially for air temperatures below -20°C (-4°F) or elevations above 1500 m (5000 ft).

- Cold Filter Plugging Point (CFPP)

The temperature at which diesel fuel begins to cloud or jell. Use diesel fuels with a CFPP which is at least 5°C (9°F) below the expected low air temperature.

- Sulfur Content of 0.05% (Max)

If diesel fuel being used has a sulfur content greater than 0.05%, reduce the service interval for engine oil and filter by 50%.

Consult your local diesel fuel distributor for properties of the diesel fuel available in your area.

SPECIFICATIONS AND INFORMATION GENERAL INFORMATION

Diesel Fuel Storage

Important: Avoid Damage! DO NOT USE GALVANIZED CONTAINERS - diesel fuel stored in galvanized containers reacts with zinc coating in the container to form zinc flakes. If fuel contains water, a zinc gel will also form. The gel and flakes will quickly plug fuel filters and damage fuel injectors and fuel pumps.

It is recommended that diesel fuel be stored ONLY in a clean, approved POLYETHYLENE PLASTIC container WITHOUT any metal screen or filter. This will help prevent any accidental sparks from occurring. Store fuel in an area that is well ventilated to prevent possible igniting of fumes by an open flame or spark; this includes any appliance with a pilot light.


Important: Avoid Damage! Keep all dirt, scale, water, or other foreign material out of fuel.

Keep fuel in a safe, protected area and in a clean, properly marked ("DIESEL FUEL") container. DO NOT use deicers to attempt to remove water from fuel. DO NOT depend on fuel filters to remove water from fuel. It is recommended that a water separator be installed in the storage tank outlet. BE SURE to properly discard unstable or contaminated diesel fuel and/or their containers when necessary.

4-Cycle Diesel Engine Oil - North America

Use oil viscosity based on the expected air temperature range during the period between oil changes.

The following John Deere oils are preferred:

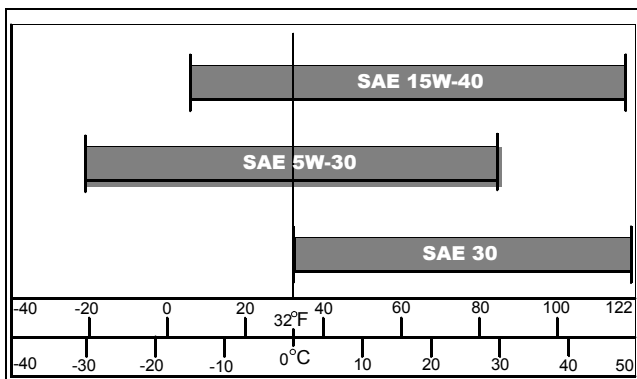

- PLUS-50™
- TORQ-GARD SUPREME™


Other oils may be used if above John Deere oils are not available, provided they meet the following specifications:

- API Service Classification CF or higher.

4-Cycle Diesel Engine Oil - Europe

Use oil viscosity based on the expected air temperature range during the period between oil changes.

The following John Deere oils are preferred:

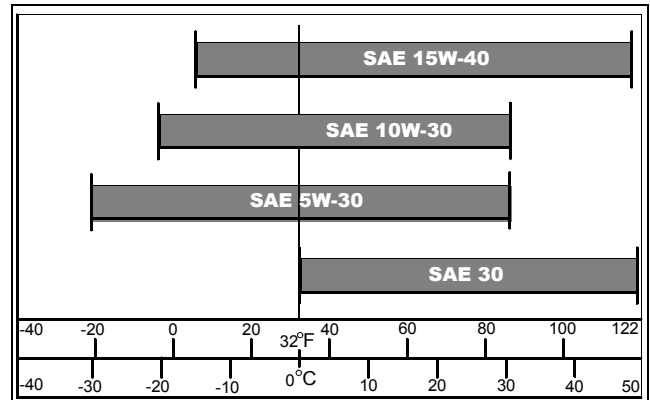

- TORQ-GARD SUPREME® - SAE 15W-40.
- UNI-GARD® - SAE 15W-40.
- TORQ-GARD SUPREME - SAE 5W-30.
- TORQ-GARD SUPREME - SAE 5W-30.
- UNI-GARD - SAE 5W-30.

The following John Deere oils are also recommended, based on their specified temperature range:

- TORQ-GARD SUPREME- SAE 10W-30.
- UNI-GARD - SAE 10W-30.
- TORQ-GARD SUPREME - SAE 30.
- UNI-GARD - SAE 30.


Other oils may be used if above John Deere oils are not available, provided they meet the following specification:

- CCMC Specification D4 or Mercedes Benz MB228.1 or higher.

SPECIFICATIONS AND INFORMATION GENERAL INFORMATION

Transmission and Hydraulic Oil

Important: Avoid Damage! Machine is filled with John Deere HY-GARD™ (J20C) Transmission/Hydraulic Oil at the factory. DO NOT mix oils. DO NOT use type “F” automatic transmission fluid or J20D Low Viscosity HY-GARD.

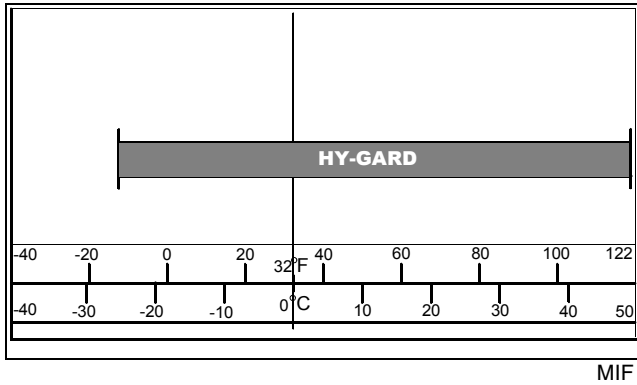

Use the following oil viscosity based on the air temperature range. Operating outside of the recommended oil air temperature range may cause premature hydrostatic transmission failure.

John Deere HY-GARD™ (J20C) Transmission Oil is specially formulated to provide maximum protection against mechanical wear, corrosion, and foaming.

Grease - North America

Important: Avoid Damage! ONLY use a quality grease in this application. DO NOT mix any other greases in this application. DO NOT use any BIO-GREASE in this application.

The following John Deere greases are preferred for the machine and lift arms:

- John Deere Multi-Purpose SD Polyurea Grease (TY6341).
- John Deere Special-Purpose HD Moly (TY6333).

The following John Deere greases are preferred for the cutting units and unit attachments:

- John Deere Special Purpose Golf and Turf Cutting Unit Grease (TY25083).
- John Deere Special Purpose Cornhead Grease (AN102562).
- John Deere Multi-Purpose SD Polyurea Grease (TY6341).

Other greases may be used if above preferred John Deere greases are not available, provided they meet the following specifications:

- Polyurea Grease - NLGI Grade 2.
- Calcium Complex Grease - NLGI Grade 2.
- John Deere Standard JDM J13E4 - NLGI Grade 2.

Grease - Europe

Use the following grease based on the air temperature range. Operating outside of the recommended grease air temperature range may cause premature failures.

Important: Avoid Damage! ONLY use a quality grease in this application. DO NOT mix any other greases in this application. DO NOT use any BIO-GREASE in this application.

The following John Deere greases are PREFERRED:

- GREASE-GARD™ - JDM J13E4, NLGI Grade 2.
- Reel Support Grease - JDM J13E6, NLGI Grade 0.

Other greases may be used if above preferred John Deere greases are not available, provided they meet the following specifications:

Reel Support Grease Applications:

- Polyurea Grease - NLGI Grade 2.
- Calcium Complex Grease - Grade 2.
- Lithium Complex Grease - NLGI Grade 0.
- John Deere Standard JDM J13E4 - NLGI Grade 2.

Alternative Lubricants

Conditions in certain geographical areas outside the United States and Canada may require different lubricant recommendations than the ones printed in this technical manual or the operator's manual. Consult with your John Deere Dealer, or Sales Branch, to obtain the alternative lubricant recommendations.

Important: Avoid Damage! Use of alternative lubricants could cause reduced life of the component.

If alternative lubricants are to be used, it is recommended that the factory fill be thoroughly removed before switching to any alternative lubricant.

Synthetic Lubricants

Synthetic lubricants may be used in John Deere equipment if they meet the applicable performance requirements (industry classification and/or military specification) as shown in this manual.

The recommended air temperature limits and service or lubricant change intervals should be maintained as shown in the operator's manual.

Avoid mixing different brands, grades, or types of oil. Oil manufacturers blend additives in their oils to meet certain specifications and performance requirements. Mixing different oils can interfere with the proper functioning of these additives and degrade lubricant performance.

Lubricant Storage

All machines operate at top efficiency only when clean lubricants are used. Use clean storage containers to handle all lubricants. Store them in an area protected from dust, moisture, and other contamination. Store drums on their sides. Make sure all containers are properly marked as to their contents. Dispose of all old, used containers and their contents properly.

Mixing of Lubricants

In general, avoid mixing different brands or types of lubricants. Manufacturers blend additives in their lubricants to meet certain specifications and performance requirements. Mixing different lubricants can interfere with the proper functioning of these additives and lubricant properties which will downgrade their intended specified performance.

Oil Filters

Important: Avoid Damage! Filtration of oils is critical to proper lubrication performance. Always change filters regularly.

The following John Deere oil filters are PREFERRED:

- **Automotive and light truck engine oil filters.**

Most John Deere filters contain pressure relief and anti-drainback valves for better engine protection.

Other oil filters may be used if above recommended John Deere oil filters are not available, provided they meet the following specification:

- ASTB Tested in Accordance with SAE J806.

Diesel Engine Coolant - North America

Important: Avoid Damage! Using incorrect coolant mixture can damage the radiator:

- **Do not operate engine with plain water.**
- **Use ethylene-glycol based antifreeze approved for use in aluminum radiators or aluminum engines.**
- **Do not exceed a 50% mixture of coolant and water.**
- **Do not pour coolant or water into the radiator when the engine is hot.**

The following John Deere coolants are preferred:

- COOL-GARD™ PRE-DILUTED SUMMER COOLANT (TY16036).
- COOL-GARD™ CONCENTRATED SUMMER COOLANT (TY16034).

If neither of recommended engine coolants is available, use a glycol base coolant that meets the following specification:

- ASTM D4985 (JDM H24A2).

Check container label before using to be sure it has the appropriate specifications for your machine. Use coolant with conditioner or add conditioner to coolant before using.

If using concentrate, mix approximately 50 percent antifreeze with 50 percent distilled or deionized water before adding to cooling system. This mixture will provide freeze protection to -37 degrees C (-34 degrees F).

Certain geographical areas may require lower temperature protection. See the label on your antifreeze container or consult your John Deere dealer to obtain the latest information and recommendations. Never exceed the maximum dilution rate for the coolant you are using. Exceeding the maximum rate will greatly reduce the coolant effectiveness.

SPECIFICATIONS AND INFORMATION GENERAL INFORMATION

Diesel Engine Coolant Drain Interval - North America

When using John Deere Pre-Diluted (TY16036) Automobile and Light Duty Engine Service coolants, drain and flush the cooling system and refill with fresh coolant mixture every 36 months or 3,000 hours of operation, whichever comes first.

When using John Deere Concentrate (TY16034) Automobile and Light Duty Engine Service coolants, drain and flush the cooling system and refill with fresh coolant mixture every 24 months or 2,000 hours of operation, whichever comes first.

If above John Deere Automobile and Light Duty Engine Service coolants are not being used, drain, flush, and refill the cooling system according to instructions found on product container or in equipment operator's manual or technical manual.

Diesel Engine Coolant - Europe

The engine cooling system, when filled with a proper dilution mixture of anti-freeze and deionized or distilled water, provides year-round protection against corrosion, cylinder liner pitting, and winter freeze protection down to -37°C (-34°F).

The following John Deere coolant is **PREFERRED**:

- **COOL-GARD™ COOLANT CONCENTRATE.**

If above preferred coolant is not available, use any Automobile and Light Duty Engine Service ethylene glycol base coolant meeting the following specification:

- ASTM D3306 (JDM H24C1).

Read container label completely before using and follow instructions as stated.

Important: Avoid Damage! To prevent engine damage, DO NOT use pure anti-freeze or less than a 50% anti-freeze mixture in the cooling system. DO NOT mix or add any additives/conditioners to the cooling system in Lawn and Grounds Care/Golf and Turf Division equipment. Water used to dilute engine coolant concentrate must be of high quality - clean, clear, potable water (low in chloride and hardness - Table 1) is generally acceptable. DO NOT use salt water. Deionized or distilled water is best to use. Coolant that is not mixed to these specified levels and water purity can cause excessive scale, sludge deposits, and increased corrosion potential.

Water Quality	
Property	Requirements
Total Solids (Max)	340 ppm (20 grns/gal)
Total Hardness (Max)	170 ppm (10 grns/gal)
Chloride (as Cl) (Max)	40 ppm (2.5 grns/gal)
Sulfate (as SO ₄) (Max)	100 ppm (5.8 grns/gal)

Mix 50 percent anti-freeze concentrate with 50 percent distilled or deionized water. This mixture will protect the cooling system down to -37°C (-34°F) and up to 108°C (226°F).

Certain geographical areas may require lower air temperature protection. See the label on your anti-freeze container or consult your John Deere dealer to obtain the latest information and recommendations.

Diesel Engine Coolant Drain Interval - Europe

When using John Deere COOL-GARD Coolant Concentrate for Automobile and Light Duty Engine Service, drain and flush the cooling system and refill with fresh coolant mixture every 24 months or 2,000 hours of operation, whichever comes first.

If above John Deere Automobile and Light Duty Engine Service coolant is not being used, drain, flush, and refill the cooling system according to instructions found on product container or in equipment operator's manual or technical manual.

SPECIFICATIONS AND INFORMATION IDENTIFICATION NUMBERS


Identification Numbers

Serial Number Location

When ordering parts or submitting a warranty claim, it is **IMPORTANT** that you include the mower product identification number and the component serial numbers.

The locations of mower identification number and component serial numbers are shown.

Machine Identification Number

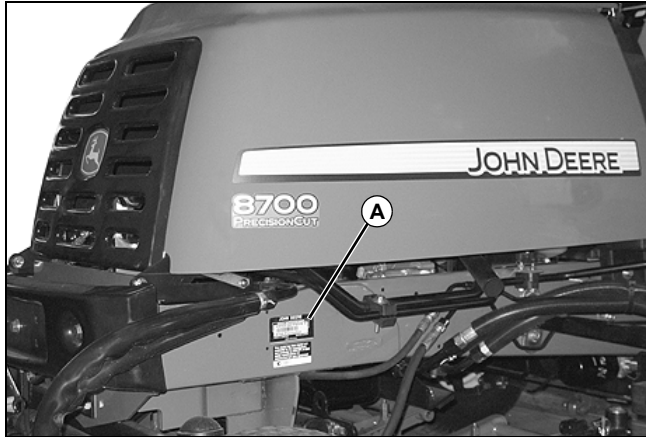

MX24806

The mower identification number plate (A) is located on the right-hand frame under the engine compartment.

Engine Serial Number




M18579

The engine serial number plate (A) is located on the top of the valve cover.


Cutting Unit Serial Numbers

Note: The rotary cutting units do not have serial number plates.

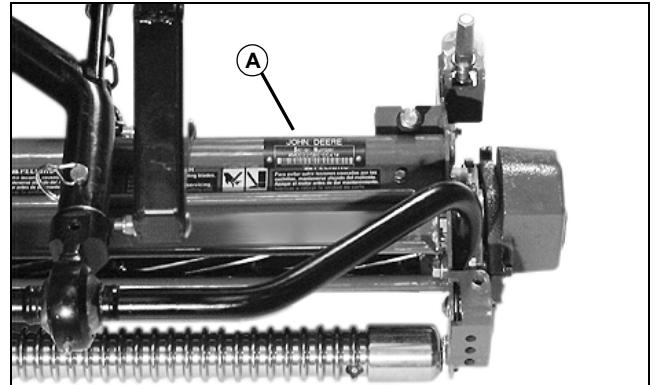

M84563

Picture Note: 22 In. Standard

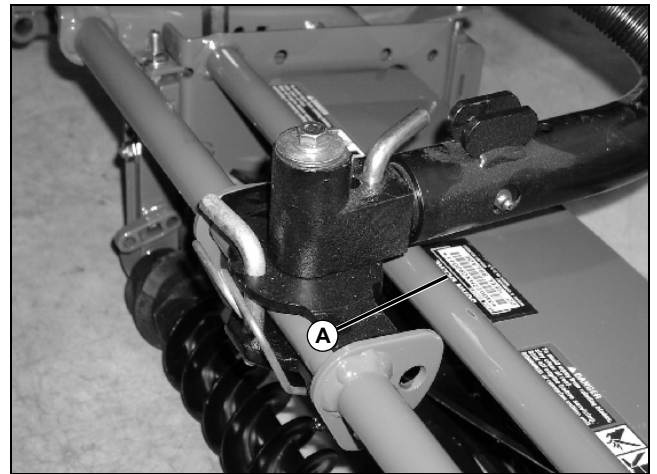

MX18036

Picture Note: 22 In. Heavy Duty ESP

The cutting unit serial number plate (A) is located on top of the cutting unit.

SPECIFICATIONS AND INFORMATION IDENTIFICATION NUMBERS



ENGINE - DIESEL TABLE OF CONTENTS

Table of Contents

Specifications23

Engine Specifications23

Torque Specifications28

Tools and Materials30

Tools.....30

Other Materials31

Component Location32

Starter Components32

Theory of Operation33

Fuel and Air System Operation33

Cooling System Operation34

Lubrication System Operation35

Diagnostics36

Symptom: Engine Will Not Start36

Symptom: Engine Starts but Does Not
Continue Running36

Symptom: Low Engine Output.....37

Symptom: Exhaust Color WHITE
Under Load.....38

Symptom: Exhaust Color BLACK
Under Load.....39

Symptom: Exhaust Temperature Too High ..39

Symptom: Engine Runs Rough.....40

Symptom: Excessive Fuel Consumption.....41

Symptom: Excessive Oil Consumption41

Symptom: Fuel Oil in Crankcase.....42

Symptom: Coolant in Crankcase.....42

Symptom: Low Oil Pressure.....42

Symptom: Engine Is Overheating.....42

Symptom: Low Engine Coolant
Temperature.....43

Symptom: Low Compression43

Tests and Adjustments44

Test Cylinder Compression44

Adjust Slow Idle.....44

Adjust Torque Capsule.....45

Injection Pump Static Timing.....45

Adjust Valve Clearance48

Check Valve Lift49

Check Connecting Rod Side Play50

Check Connecting Rod Bearing Clearance..51

Check Crankshaft End Play51

Check Crankshaft Main Bearing Clearance .52

Check Camshaft End Play53

Check Timing Gear Backlash 53

Test Fuel Injection Nozzles..... 54

Test Thermostat Opening 55

Adjust Fan and Alternator Drive Belt 56

Test 48 Volt Generator Belt Tension 56

Test Cylinder Leakdown 56

Test Cooling System Pressure 57

Test Radiator Pressure Cap 58

Test Engine Oil Pressure..... 58

Test Air Intake System Leakage..... 59

Adjust Throttle Cable 59

Test Fuel System Leakage 60

Fuel Transfer Pump Pressure Test..... 60

Fuel Transfer Pump Flow Test 60

Bleed Fuel System..... 61

Test Coolant Temperature Switch 61

Extending Turbocharger Life 61

Turbocharger Seven-Step Inspection 63

Check Turbocharger Rotor Shaft Axial Play 66

Check Turbocharger Rotor Shaft Radial
Play..... 66

Turbocharger Waste Gate Test 67

Repair 68

Remove and Install Engine..... 68

Remove and Install Rocker Arm Cover 70

Remove and Install Rocker Arm Assembly . 71

Inspect Rocker Arm Assembly..... 72

Remove and Install Cylinder Head and
Valves 73

Disassemble and Assemble Cylinder Head
and Valves 74

Inspect Cylinder Head and Valves..... 74

Remove and Install Exhaust Manifold 77

Remove and Install Intake Manifold..... 78

Grind Valve Seats..... 78

Lap Valves..... 79

Measure Piston-to-Cylinder Head
Clearance 79

Remove and Install Piston and
Connecting Rod 79

Disassemble and Assemble Piston and
Connecting Rod 81

Inspect Piston and Connecting Rod 82

Inspect Cylinder Bore 85

Inspect Cylinder Bore Taper and
Out-of-Round..... 87

Replace Crankshaft Rear Oil Seal..... 87

Replace Crankshaft Front Oil Seal 88

ENGINE - DIESEL TABLE OF CONTENTS

Remove and Install Crankshaft and Main Bearings	88
Inspect Crankshaft and Main Bearings	89
Remove and Install Crankshaft Gear	90
Remove and Install Flywheel	90
Remove and Install Camshaft	91
Inspect Camshaft	92
Remove and Install Camshaft Gear	94
Remove and Install Cam Followers.....	94
Inspect Cam Followers	95
Remove and Install Timing Gear Cover	96
Remove and Install Idler Gear.....	97
Inspect Idler Gear.....	97
Remove and Install Timing Gear Cover Mounting Plate	98
Remove and Install Oil Pan, Crankcase Extension, and Strainer	98
Remove and Install Oil Pump	99
Disassemble and Assemble Oil Pump	99
Inspect Oil Pump	100
Remove and Install Optional Oil Cooler	101
Remove and Install Thermostat	101
Inspect Coolant Pump	101
Remove and Install Coolant Pump.....	102
Disassemble and Assemble Water Separator	102
Remove Fuel Injection Pump	103
Install Fuel Injection Pump	105
Remove and Install Fuel Injection Nozzles	105
Disassemble and Assemble Fuel Injection Nozzles.....	107
Inspect and Clean Fuel Injection Nozzles ..	108
Remove and Install Starting Motor	109
Disassemble and Assemble Starting Motor	109
Inspect and Test Starting Motor	110
Disassemble and Assemble Starter Gear Train	112
Disassemble, Inspect, and Assemble Starter Solenoid.....	113
Remove and Install 12V Alternator.....	114
Remove and Install Turbocharger	115
Repair Turbocharger	115
Prelube Turbocharger	115

ENGINE - DIESEL SPECIFICATIONS

Specifications

Engine Specifications

3TNV84T

Machine Models Used On	7500, 7500 E-Cut, 7700
Make	Yanmar
Model	3TNV84T
Output Power	27.7 kW (37.1 hp)

3TNV84HT

Machine Models Used On	8500, 8500 E-Cut, 8700, 8800
Make	Yanmar
Model	3TNV84HT
Output Power	32.1 kW (43.1 hp)

General Specifications

Type	4-cycle diesel
Cylinders	3
Bore	84 mm (3.31 in.)
Stroke	90 mm (3.54 in.)
Displacement	1.496 L (91.3 cu. in.)
Firing Order	1-3-2
Direction of Rotation	Counterclockwise (viewed from flywheel)
Combustion System	Direct injection type
Compression Ratio	18:1
Cooling	Liquid
Governor	Centrifugal
RPM at Slow Idle Speed	1400 ± 50 rpm
RPM at Fast Idle (No-Load) Speed	2800 ± 50 rpm
Rated RPM	2600
Torque Rise	20 percent minimum

Startability

W/O Block Heater	-17.8°C (0°F)
W/ Block Heater	-28.9°C (-20°F)

Repair Specifications

12 V Alternator

Drive Belt Deflection @ 98 N (22 lb-force)	8.0-13.0 mm (0.315-0.512 in.)
Slip Ring Diameter (Minimum)	14 mm (0.550 in.)
Exposed Brush Length (Minimum)	4.50 mm (0.170 in.)
Exposed Brush Length (Maximum)	10.50 mm (0.410 in.)
Output	40 amp

48 V Alternator

Drive Belt Deflection at 50 N (11 lb-force)	30 mm (1.2 in.)
Output at 2800 rpm	180 amp

ENGINE - DIESEL SPECIFICATIONS

Cam Follower Bore

Bore ID	12.00-12.02 mm (0.472-0.473 in.)
Wear Limit	12.04 mm (0.474 in.)
Clearance	0.010-0.043 mm (0.001-0.002 in.)

Cam Follower Stem

Stem OD	11.98-11.99 mm (0.471-0.472 in.)
Wear Limit	11.93 mm (0.470 in.)

Camshaft

Camshaft End Play	0.05-0.20 mm (0.002-0.010 in.)
Wear Limit	0.03 mm (0.012 in.)
Camshaft Bend (Maximum)	0.03 mm (0.002 in.)
Camshaft Lobe Height	38.64-38.77 mm (1.521-1.526 in.)
Wear Limit	38.40 mm (1.512 in.)

Camshaft Bushings

Camshaft Bushing ID at Gear Housing	44.990-45.055 mm (1.771-1.774 in.)
Camshaft Bushing ID at Intermediate and Flywheel End	45.000-45.025 mm (1.772-1.773 in.)
Wear Limit	45.10 mm (1.776 in.)
Camshaft Bushing-to-Journal Clearance	0.23 mm (0.009 in.)

Camshaft Journals

Gear Housing and Flywheel End Camshaft Journals OD	44.93-44.95 mm (1.769-1.770 in.)
Intermediate Camshaft Journals	44.91-44.94 mm (1.768-1.769 in.)
Wear Limit	44.85 mm (1.766 in.)

Connecting Rod Bearing

Bearing ID	47.952-47.962 mm (1.888-1.891 in.)
Wear Limit	48.07 mm (1.893 in.)
Bearing Oil Clearance	0.038-0.074 mm (0.001-0.003 in.)
Wear Limit	0.150 mm (0.006 in.)

Crankshaft and Main Bearings

Crankshaft Bend Variation	0.02 mm (0.001 in.)
Connecting Rod Journal OD	47.95-47.96 mm (1.8878-1.8882 in.)
Wear Limit	47.91 mm (1.886 in.)
Main Bearing Journal OD	53.95-53.96 mm (2.1240-2.1244 in.)
Wear Limit	53.91 mm (2.122 in.)
Main Bearing Oil Clearance	0.038-0.074 mm (0.001-0.003 in.)
Wear Limit	0.15 mm (0.006 in.)

Cylinder Bore

Standard Cylinder Bore ID	84.00-84.03 mm (3.307-3.308 in.)
Wear Limit	84.20 mm (3.315 in.)
Oversize Cylinder Bore ID	84.25-84.28 mm (3.317-3.318 in.)
Wear Limit	84.45 mm (3.325 in.)
Piston-to-Cylinder Bore Clearance	0.040-0.070 mm (0.001-0.003 in.)
Cylinder Roundness	0.00-0.01 mm (0.0000-0.0004 in.)

ENGINE - DIESEL SPECIFICATIONS

Wear Limit	0.03 mm (0.001 in.)
Cylinder Taper	0.00-0.01 mm (0.0000-0.0004 in.)
Wear Limit	0.03 mm (0.001 in.)

Cylinder Head

Cylinder Head Flatness (Maximum Distortion)	0.15 mm (0.006 in.)
Cylinder Head Flatness (Resurface Range)	0.00-0.05 mm (0.000-0.002 in.)
Wear Limit	0.15 mm (0.006 in.)

Flywheel

Flatness	0.02 mm (0.001 in.)
----------------	---------------------

Fuel Injection Nozzles

Nozzle Contact Surface	0.10 mm (0.004 in.)
------------------------------	---------------------

Idler Gear

Shaft OD	45.950-45.975 mm (1.809-1.810 in.)
Wear Limit	45.93 mm (1.808 in.)
Bushing ID	46.000-46.025 mm (1.811-1.812 in.)
Wear Limit	46.08 mm (1.814 in.)
Shaft and Bushing Clearance	0.18 mm (0.007 in.)

Oil Pressure Regulating Valve

Spring Free Length	46 mm (1.810 in.)
Spring Compressed Length at 20.5 N (4.6 lb-force)	27.5 mm (1.080 in.)

Oil Pump

Oil Pump Gear Backlash	0.12 mm (0.005 in.)
Rotor Shaft OD-to-Backing Plate ID Clearance	0.013-0.043 mm (0.001-0.002 in.)
Wear Limit	0.20 mm (0.008 in.)
Rotor Recess	0.03-0.09 mm (0.001-0.002 in.)
Wear Limit	0.15 mm (0.006 in.)
Outer Rotor-to-Pump Body Clearance	0.10-0.16 mm (0.004-0.006 in.)
Wear Limit	0.25 mm (0.010 in.)
Inner-to-Outer Rotor Clearance	0.02-0.07 mm (0.001-0.003 in.)
Wear Limit	0.12 mm (0.006 in.)

Piston

Standard Piston OD	83.95-83.98 mm (3.305-3.306 in.)
Wear Limit	83.90 mm (3.303 in.)
Oversize Piston OD	84.20-84.23 mm (3.315-3.316 in.)
Wear Limit	84.10 mm (3.311 in.)

Piston-to-Cylinder Head

Clearance	0.72 ± 0.06 mm (0.025 ± 0.002 in.)
-----------------	------------------------------------

Piston Pin Bore

Piston Pin Bore ID	26.00-26.01 mm (1.0236-1.0240 in.)
Wear Limit	26.04 mm (1.025 in.)
Piston Pin-to-Piston Oil Clearance	0.00-0.02 mm (0.00-0.001 in.)

ENGINE - DIESEL SPECIFICATIONS

Product: John Deere 7500/7700/8500/8700/8800/7500/8500 E-Cut Hybrid Lightweight Fairway Mower Service Repair Technical

Full Download: <https://www.bobmanualstore.com/downloads/john-deere-7500-7700-8500-8700-88007500-8500-e-cut-hybrid-lightweight-fairway-mower-service-repair-technical-manual/>

Wear Limit	0.12 mm (0.005 in.)
Piston Pin Bushing	
Piston Pin Bushing ID	26.025-26.038 mm (1.0246-1.0251 in.)
Wear Limit	26.07 mm (1.026 in.)
Piston Pin-to-Rod Bore Oil Clearance	0.03-0.05 mm (0.001-0.002 in.)
Wear Limit	0.10 mm (0.004 in.)
Piston Pin Diameter	
Piston Pin OD	25.99-26.00 mm (1.023-1.024 in.)
Wear Limit	25.97 mm (1.022 in.)
Piston Ring End Gap	
Piston Ring End Gap	0.20-0.40 mm (0.008-0.016 in.)
Wear Limit	1.50 mm (0.059 in.)
Piston Ring Groove Clearance	
First Compression Ring Groove Side Clearance	0.075-0.11 mm (0.003-0.004 in.)
Wear Limit	0.025 mm (0.010 in.)
Second Compression Ring Groove Side Clearance	0.045-0.080 mm (0.002-0.003 in.)
Wear Limit	0.025 mm (0.010 in.)
Oil Control Ring Groove Side Clearance	0.025-0.060 mm (0.001-0.002 in.)
Wear Limit	0.020 mm (0.008 in.)
Push Rods	
Maximum Bend	0.03 mm (0.001 in.)
Length	178.25-178.75 mm (7.018-7.037 in.)
Rocker Arm Shaft	
Rocker Arm Shaft OD	15.97-15.98 mm (0.628-0.629 in.)
Rocker Arm Shaft Wear Limit	15.94 mm (0.628 in.)
Rocker Arm Shaft-to-Rocker Arm Bushing	
Oil Clearance	0.02-0.05 mm (0.001-0.002 in.)
Oil Clearance Wear Limit	0.13 mm (0.005 in.)
Rocker Arms and Supports	
Rocker Arm and Support ID	16.00-16.02 mm (0.630-0.631 in.)
Rocker Arm and Support Wear Limit	16.07 mm (0.633 in.)
Springs	
Valve Spring Free Length	44.4 mm (1.748 in.)
Wear Limit	43.9 mm (1.730 in.)
Spring Inclination	1.40 mm (0.055 in.)
Valve Guides	
Valve Guide ID	8.010-8.025 mm (0.3154-0.3160 in.)
Wear Limit	8.10 mm (0.319 in.)
Oil Clearance	0.035-0.070 mm (0.001-0.003 in.)
Valve Guide Projection	15 mm (0.591 in.)

Sample manual. Download All 682 pages at:

<https://www.bobmanualstore.com/downloads/john-deere-7500-7700-8500-8700-88007500-8500-e-cut-hybrid-lightweight-fairway-mower-service-repair-technical-manual/>