

# 310G Backhoe Loader Repair

## TECHNICAL MANUAL 310G Backhoe Loader TM1886 26MAR04 (ENGLISH)

For complete service information also see:

310G Backhoe Loader Operation and Test .....	TM1885
POWERTECH®4.5 L & 6.8 L Diesel Engines—Base Engine .....	CTM104
POWERTECH®4.5 L & 6.8 L Diesel Engines—Mechanical Fuel Systems. ....	CTM207
POWERTECH®4.5 L & 6.8 L Diesel Engines—Level 12 Electronic Fuel System with DE10 Pump .....	CTM331
Alternators and Starting Motors.....	CTM77
Front Wheel Drive Axles—AS and MS Series.....	CTM4687
SERVICE ADVISOR™System Computer Connection.....	T133991

**Worldwide Construction  
And Forestry Division**  
U.S.A.

Sample manual. Download All 780 pages at:


<https://www.bobmanualstore.com/downloads/john-deere-310g-backhoe-loader-service-repair-technical-manual/>

# Introduction

## Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

TX,INTR,MB52 -19-12SEP97-1/1

Sample manual. Download All 780 pages at:

<https://www.bobmanualstore.com/downloads/john-deere-310g-backhoe-loader-service-repair-technical-manual/>

TM1886 (26MAR04)

310G Backhoe Loader

032604

PN=2

### Technical Information Feedback Form

We need your help to continually improve our technical publications. Please copy this page and FAX or mail your comments, ideas and improvements.

**SEND TO:** John Deere Dubuque Works  
P.O. Box 538  
Attn: Publications Supervisor, Dept. 303  
Dubuque, IA 52004-0538

**FAX NUMBER:** 563-589-5800

Ideas, Comments (Please State Page Number): \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

OVERALL, how would you rate the quality of this publication? (Check one)

	Poor		Fair		Good		Very Good		Excellent	
1	2	3	4	5	6	7	8	9	10	

\_\_\_\_\_

Company Name: \_\_\_\_\_

Technician Name: \_\_\_\_\_

Address: \_\_\_\_\_

Phone: \_\_\_\_\_

Fax No.: \_\_\_\_\_

Dealer Acct. No.: \_\_\_\_\_

**THANK YOU!**

*Introduction*

# Contents

## SECTION 00—General Information

Group 01—Safety Information

## SECTION 01—Wheels

Group 0110—Powered or Non-Powered Wheels and Fastenings

## SECTION 02—Axles and Suspension Systems

Group 0225—Input Drive Shafts and U-Joints  
Group 0230—Non-Powered Wheel Axles  
Group 0240—Powered Wheel Axle (MFWD)  
Group 0250—Axle Shaft, Bearings and Reduction Gears

## SECTION 03—Transmission

Group 0300—Removal and Installation  
Group 0315—Controls Linkage  
Group 0325—Input Drive Shafts and U-Joint  
Group 0350—Gears, Shafts, Bearings, and Power Shift Clutch  
Group 0360—Hydraulic System

## SECTION 04—Engine

Group 0400—Removal and Installation

## SECTION 05—Engine Auxiliary Systems

Group 0505—Cold Weather Starting Aid  
Group 0510—Cooling System  
Group 0515—Speed Controls  
Group 0520—Intake System  
Group 0530—Exhaust System  
Group 0560—External Fuel Supply System

## SECTION 06—Torque Converter

Group 0651—Turbine, Gears and Shaft

## SECTION 09—Steering System

Group 0960—Hydraulic System

## SECTION 10—Service Brakes

Group 1011—Active Elements  
Group 1060—Hydraulic System

## SECTION 16—Electrical Systems

Group 1671—Batteries, Support, and Cables

Group 1672—Alternator, Regulator and Charging System Wiring

Group 1674—Wiring Harness and Switches

Group 1676—Instruments and Indicators

Group 1677—Motors and Actuators

## SECTION 17—Frames, Chassis or Supporting Structure

Group 1740—Frame Installation

Group 1749—Chassis Weights

## SECTION 18—Operator's Station

Group 1800—Removal and Installation

Group 1810—Operator Enclosure

Group 1821—Seat and Seat Belt

Group 1830—Heating and Air Conditioning

## SECTION 19—Sheet Metal and Styling

Group 1910—Hood and Engine Enclosure

Group 1913—Miscellaneous Shields

Group 1921—Grille and Grille Housing

Group 1927—Fenders

## SECTION 20—Safety, Convenience and Miscellaneous

Group 2001—Radio

Group 2004—Horn and Warning Devices

## SECTION 21—Main Hydraulic System

Group 2160—Hydraulic System

## SECTION 31—Loader

Group 3100—Loader

Group 3102—Bucket

Group 3115—Control Linkages

Group 3160—Hydraulic System

## SECTION 33—Backhoe

Group 3302—Bucket

Group 3315—Control Linkage

Group 3340—Frames

Group 3360—Hydraulic System

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2004  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright © 2000, 2001, 2002, 2003

00

**SECTION 99—Dealer Fabricated Tool**  
Group 9900—Dealer Fabricated Tool

01

02

03

04

05

06

09

10

16

Contents

17

18

19

20

21

31

33

99

INDX

*Contents*

17

18

19

20

21

31

33

99

INDX

# Section 00

## General Information


### Contents

	Page
<b>Group 01—Safety Information</b>	
Safety Features . . . . .	00-01-1
Recognize Safety Information . . . . .	00-01-2
Follow Safety Instructions . . . . .	00-01-2
Operate Only If Qualified . . . . .	00-01-3
Wear Protective Equipment . . . . .	00-01-3
Avoid Unauthorized Machine Modifications . . . . .	00-01-3
Inspect Machine . . . . .	00-01-4
Stay Clear Of Moving Parts . . . . .	00-01-4
Avoid High-Pressure Fluids . . . . .	00-01-4
Beware Of Exhaust Fumes . . . . .	00-01-5
Prevent Fires . . . . .	00-01-5
Prevent Battery Explosions . . . . .	00-01-5
Handle Chemical Products Safely . . . . .	00-01-6
Dispose Of Waste Properly . . . . .	00-01-6
Prepare For Emergencies . . . . .	00-01-6
Use Steps And Handholds Correctly . . . . .	00-01-7
Start Only From Operator's Seat . . . . .	00-01-7
Use And Maintain Seat Belt . . . . .	00-01-7
Prevent Unintended Machine Movement . . . . .	00-01-8
Prevent Unintended Machine Movement— If Equipped With Pilot Controls . . . . .	00-01-8
Avoid Work Site Hazards . . . . .	00-01-9
Keep Riders Off Machine . . . . .	00-01-9
Avoid Backover Accidents . . . . .	00-01-10
Avoid Machine Tipover . . . . .	00-01-10
Add And Operate Attachments Safely . . . . .	00-01-11
Use Special Care When Operating . . . . .	00-01-11
Operating Or Traveling On Public Roads . . . . .	00-01-12
Inspect and Maintain ROPS . . . . .	00-01-12
Park And Prepare For Service Safely . . . . .	00-01-13
Service Cooling System Safely . . . . .	00-01-13
Remove Paint Before Welding or Heating . . . . .	00-01-14
Make Welding Repairs Safely . . . . .	00-01-14
Drive Metal Pins Safely . . . . .	00-01-15
Safety Signs . . . . .	00-01-16

*Contents*

00

## Safety Features

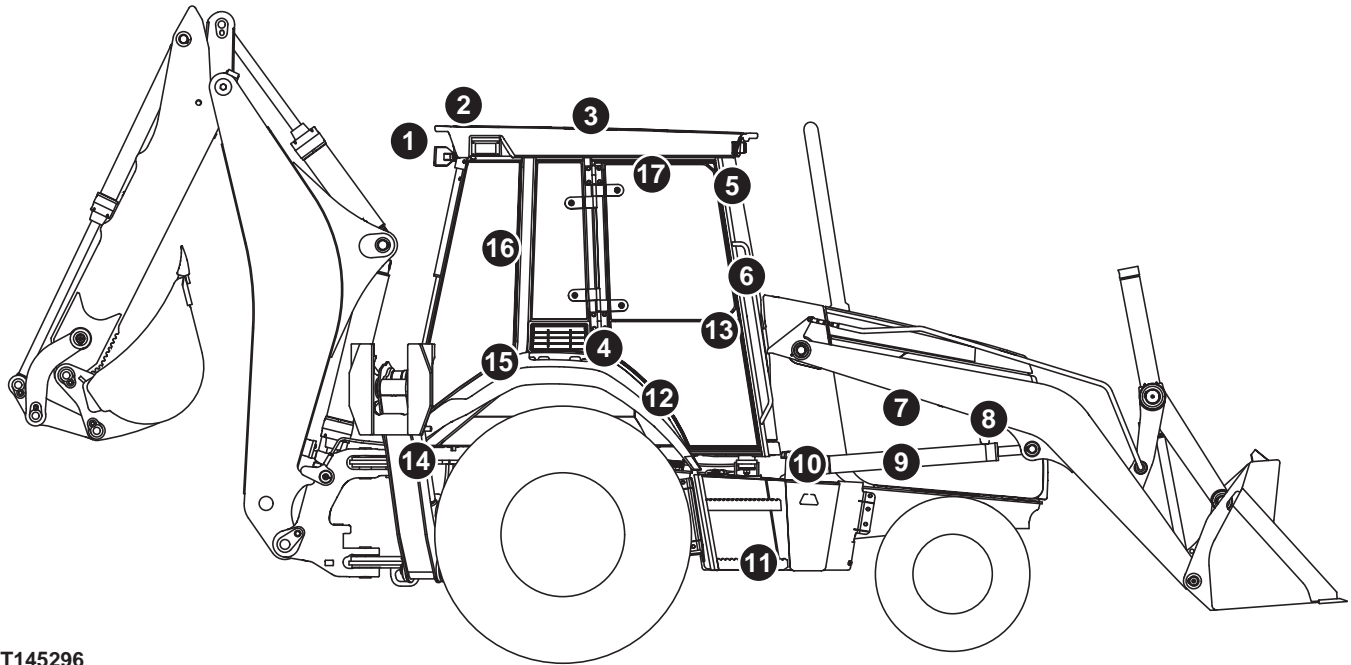

T145296

T145296 -UN-05SEP01

Please remember, the **operator** is the key to preventing accidents.

1. **Headlights/Taillights.** Two front halogen driving/work lights and two rear halogen work lights.
2. **Signal/Warning Lights.** Roof mounted turning signal lights and warning lights for on-road use.
3. **ROPS Protection.** Certified rollover protection structure surrounds the operator. Integral roof provides overhead protection.
4. **Seat Position Sensor.** An audio/visual warning alerts operator when FNR is in forward/reverse and the seat turned toward the backhoe position.
5. **Interior Rearview Mirror.** Offers the operator a view of activity behind him.
6. **Handholds.** Large and conveniently placed, make it easy to enter or exit the operator's station.
7. **Loader Boom Service Lock.** Provided for working on or around this machine with the boom raised.
8. **Engine Fan Guard.** A secondary engine fan guard inside engine compartment encloses rotating fan blades.
9. **Bypass Start Protection.** Shielding over the starter solenoid helps prevent dangerous bypass starting.
10. **Ground-Level Fueling, Daily Service Checks.** Ground-level fueling feature eliminates the need to climb on the machine to fuel it.
11. **Steps.** Wide, skid-resistant steps provide excellent footing for getting in/out of operator's station.
12. **Independent Parking/Secondary Brake.** Independent, electrically controlled, parking brake electrically engages when the engine is stopped.
13. **Neutral Start.** Prevents the engine from being started unless FNR control is in neutral.
14. **Backup Alarm.** Alerts bystanders when the machine is shifted into reverse.
15. **Seat Belt Retractors.** Seatbelt retractors help keep belts clean and convenient to use.
16. **Exceptional Visibility.** Views to either side and front or rear working tools are unrestricted.
17. **Operator Manual Holder.** A sealed manual holder keeps manual clean and dry.

TX03768.0000B8D -19-07SEP01-1/1

## Recognize Safety Information

This is the safety alert symbol. When you see this symbol on your machine or in this manual, be alert for the potential of personal injury.

Follow the precautions and safe operating practices highlighted by this symbol.

A signal word — DANGER, WARNING, or CAUTION — is used with the safety alert symbol. DANGER identifies the most serious hazards.

On your machine, DANGER signs are red in color, WARNING signs are orange, and CAUTION signs are yellow. DANGER and WARNING signs are located near specific hazards. General precautions are on CAUTION labels.



T133555 -UN-28AUG00


T133588 -19-28AUG00

TX03679,00016CC -19-21AUG00-1/1

## Follow Safety Instructions

Read the safety messages in this manual and on the machine. Follow these warnings and instructions carefully. Review them frequently. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your authorized John Deere dealer.

Be sure all operators of this machine understand every safety message. Replace operator's manual and safety labels immediately if missing or damaged.

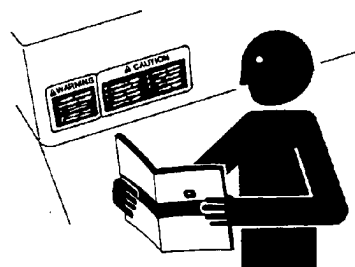

T133556 -UN-24AUG00

TX03679,00016F9 -19-28JAN03-1/1

### Operate Only If Qualified

Do not operate this machine unless you have read the operator's manual carefully and you have been qualified by supervised training and instruction.

Familiarize yourself with the job site and your surroundings before operating. Try all controls and

machine functions with the machine in an open area before starting to work.

Know and observe all safety rules that may apply to your work situation and your work site.


TX03679,00016FA -19-30OCT00-1/1

### Wear Protective Equipment

Guard against injury from flying pieces of metal or debris; wear goggles or safety glasses.

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing. Wear suitable hearing protection such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

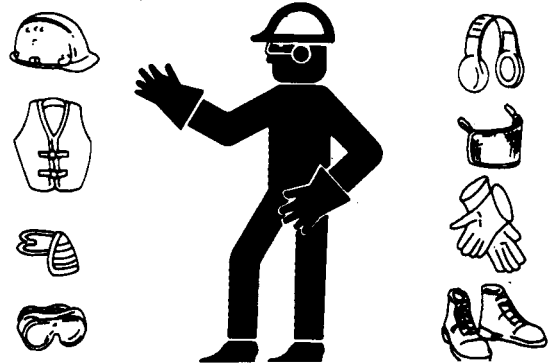

TS206 -JUN-23AUG88

TX03679,00016D0 -19-30OCT00-1/1

### Avoid Unauthorized Machine Modifications

Modifications of this machine, or addition of unapproved products or attachments, may affect machine stability or reliability, and may create a hazard for the operator or others near the machine.

Always contact an authorized dealer before making machine modifications that change the intended use, weight or balance of the machine, or that alter machine controls, performance or reliability.

TX03679,00016B7 -19-17APR01-1/1

00  
01  
4

## Inspect Machine

Inspect machine carefully each day by walking around it before starting.

Keep all guards and shields in good condition and properly installed. Fix damage and replace worn or broken parts immediately. Pay special attention to hydraulic hoses and electrical wiring.



T6607AQ -UN-18OCT88


TX03679,0001734 -19-25SEP00-1/1

## Stay Clear Of Moving Parts

Entanglements in moving parts can cause serious injury.

Stop engine before examining, adjusting or maintaining any part of machine with moving parts.

Keep guards and shields in place. Replace any guard or shield that has been removed for access as soon as service or repair is complete.

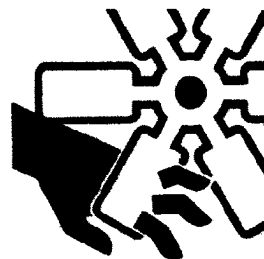

T1133592 -UN-12SEP01


TX03679,00016D2 -19-30OCT00-1/1

## Avoid High-Pressure Fluids


This machine uses a high-pressure hydraulic system. Escaping fluid under pressure can penetrate the skin causing serious injury.

**Never search for leaks with your hands.** Protect hands. Use a piece of cardboard to find location of escaping fluid. Stop engine and relieve pressure before disconnecting lines or working on hydraulic system.

**If hydraulic fluid penetrates your skin, see a doctor immediately. Injected fluid must be removed surgically within hours or gangrene may result.** Contact a knowledgeable medical source or the Deere & Company Medical Department in Moline, Illinois, U.S.A.

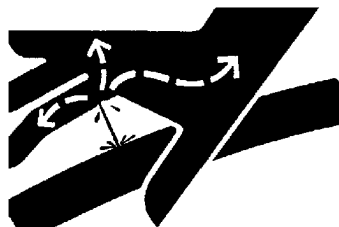

T1133509 -UN-31OCT00

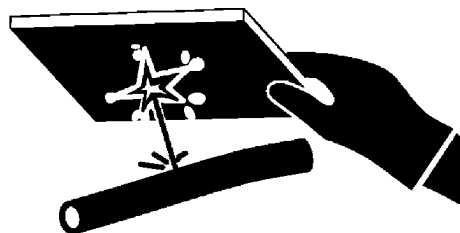


T1133840 -UN-20SEP00

TX03679,00016D3 -19-30OCT00-1/1

## Beware Of Exhaust Fumes

Prevent asphyxiation. Engine exhaust fumes can cause sickness or death.

If you must operate in a building, provide adequate ventilation. Use an exhaust pipe extension to remove the exhaust fumes or open doors and windows to bring outside air into the area.

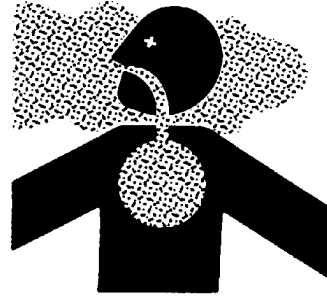

T133546 -JUN-24AUG00

TX03679,00016D4 -19-14SEP00-1/1

## Prevent Fires

**Handle Fuel Safely:** Store flammable fluids away from fire hazards. Never refuel machine while smoking or when near sparks or flame.

**Clean Machine Regularly:** Keep trash, debris, grease and oil from accumulating in engine compartment, around fuel lines, hydraulic lines and electrical wiring. Never store oily rags or flammable materials inside a machine compartment.

**Maintain Hoses and Wiring:** Replace hydraulic hoses immediately if they begin to leak, and clean up any oil spills. Examine electrical wiring and connectors frequently for damage.

**Keep A Fire Extinguisher Available:** Always keep a multi-purpose fire extinguisher on or near the machine. Know how to use extinguisher properly.



T133552 -JUN-14SEP00

T133553 -JUN-07SEP00

T133554 -JUN-07SEP00

TX03679,00016F5 -19-25SEP00-1/1

## Prevent Battery Explosions

Battery gas can explode. Keep sparks, lighted matches, and open flame away from the top of battery.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



TS204 -JUN-23AUG88


TX03679,000174A -19-14SEP00-1/1

00  
01  
6

## Handle Chemical Products Safely

Exposure to hazardous chemicals can cause serious injury. Under certain conditions, lubricants, coolants, paints and adhesives used with this machine may be hazardous.

If uncertain about safe handling or use of these chemical products, contact your authorized dealer for a Material Safety Data Sheet (MSDS) or go to internet website <http://www.jdmsds.com>. The MSDS describes physical and health hazards, safe use procedures, and emergency response techniques for chemical substances. Follow MSDS recommendations to handle chemical products safely.

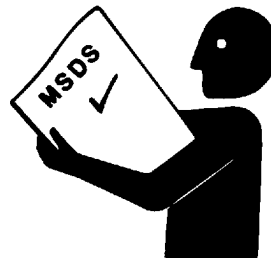

T133580 -UN-25AUG00

TX03679,00016D7 -19-05AUG02-1/1


## Dispose Of Waste Properly

Improper disposal of waste can threaten the environment. Fuel, oils, coolants, filters and batteries used with this machine may be harmful if not disposed of properly.

Never pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants can damage the atmosphere. Government regulations may require using a certified service center to recover and recycle used refrigerants.

If uncertain about the safe disposal of waste, contact your local environmental or recycling center or your authorized dealer for more information.

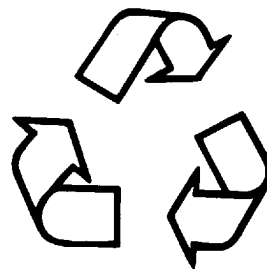

T133567 -UN-25AUG00


TX03679,0001733 -19-17APR01-1/1

## Prepare For Emergencies

Be prepared if an emergency occurs or a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

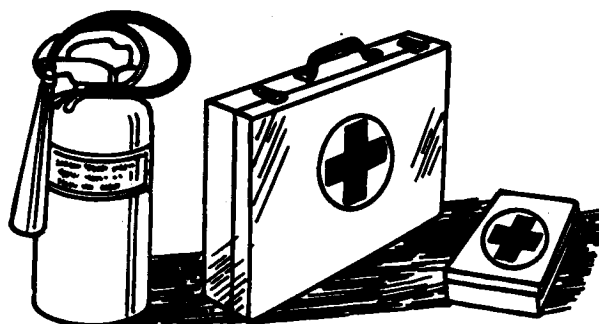


TS291 -UN-23AUG88

TX03679,000174B -19-14SEP00-1/1

### Use Steps And Handholds Correctly

Prevent falls by facing the machine when you get on and off. Maintain 3-point contact with steps and handrails. Never use machine controls as handholds.

Use extra care when mud, snow, or moisture present slippery conditions. Keep steps clean and free of grease or oil. Never jump when exiting machine. Never mount or dismount a moving machine.

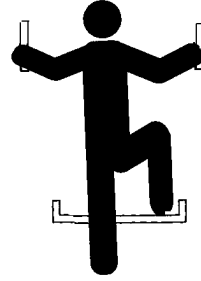

T133468 -JUN-30AUG00

TX03679,00016F2 -19-14SEP00-1/1

### Start Only From Operator's Seat

Avoid unexpected machine movement. Start engine only while sitting in operator's seat. Ensure all controls and working tools are in proper position for a parked machine.

Never attempt to start engine from the ground. Do not attempt to start engine by shorting across the starter solenoid terminals.



T133715 -JUN-07SEP00

TX03679,0001799 -19-02MAY01-1/1

### Use And Maintain Seat Belt

**Use seat belt when operating machine.** Remember to fasten seat belt when loading and unloading from trucks and during other uses.

Examine seat belt frequently. Be sure webbing is not cut or torn. Replace seat belt immediately if any part is damaged or does not function properly.

**The complete seat belt assembly should be replaced every three years, regardless of appearance.**



**USE  
SEAT  
BELT**

T133716 -19-14SEP00


TX03679,00016DD -19-17OCT00-1/1

00  
01  
8

### Prevent Unintended Machine Movement

Always set the park lock brake switch to the “ON” position before leaving the operator’s seat for any reason.

Be careful not to accidentally actuate steering, travel or other controls. Engage park brake and lower work equipment to the ground during work interruptions. Stop the engine before allowing anyone to approach the machine. Follow proper parking procedures before leaving the operator’s station.

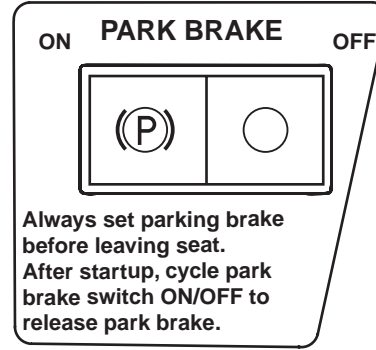


T147434 -19-26OCT01

TX03768,0000B8A -19-26OCT01-1/1

### Prevent Unintended Machine Movement—If Equipped With Pilot Controls

Be careful not to accidentally actuate control levers when co-workers are present. Always lock hydraulics on backhoe during work interruptions. Lock hydraulics before allowing anyone to approach machine.

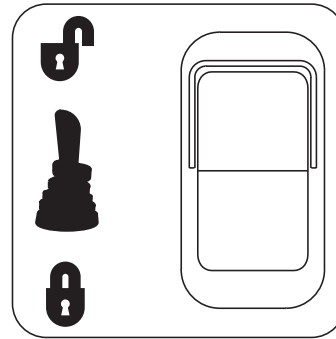

HG31779,00001D2 -19-23JAN03-1/1

## Avoid Work Site Hazards

**Avoid contact with gas lines, buried cables and water lines. Call utility line location services to identify all underground utilities before you dig.**


**Prepare work site properly.** Avoid operating near structures or objects that could fall onto the machine. Clear away debris that could move unexpectedly if run over.

**Avoid boom or attachment contact with overhead obstacles or overhead electrical lines.** Never move any part of machine or load closer than 3 m (10 ft) plus twice the line insulator length to overhead wires.

**Keep bystanders clear at all times.** Use barricades or a signal person to keep vehicles and pedestrians away. Use a signal person if moving machine in congested areas or where visibility is restricted. Always keep signal person in view. Coordinate hand signals before starting machine.

**Operate only on solid footing** with strength sufficient to support machine. Be especially alert working near embankments or excavations.

**Avoid working under over-hanging embankments or stockpiles** that could collapse on machine.

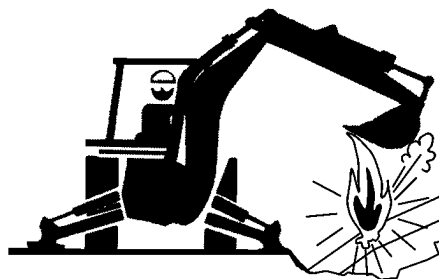

T147554 -UN-01NOV01



T147555 -UN-13DEC01

TX03768.0000BAA -19-21DEC01-1/1

## Keep Riders Off Machine

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.



T148715 -UN-06DEC01

TX03768.0000BAF -19-21NOV01-1/1

00  
01  
10

## Avoid Backover Accidents

**Before moving machine, be sure all persons are clear of the machine travel path.** Turn around and look directly for best visibility. Use mirror to assist in checking behind the machine. Keep windows and mirror clean and in good repair.

**Be certain backup warning alarm is working properly.**

**Use a signal person when backing if view is obstructed or when in close quarters.** Keep signal person in view at all times. Use prearranged hand signals to communicate.



TX03768,0000B8B -19-06SEP01-1/1

## Avoid Machine Tipover


**Use seat belt at all times.**

**Do not jump if the machine tips.** You will be unlikely to jump clear and the machine may crush you.

**Load and unload from trucks or trailers carefully.** Be sure truck is wide enough and secured on a firm level surface. Use loading ramps and attach them properly to truck bed.

**Be careful on slopes.** Use extra care on soft, rocky or frozen ground because machine may slip sideways in these conditions.

**Ensure solid footing.** Use extra care when operating on stockpile materials, or near banks or excavations that may cave-in and cause machine to tip or fall.

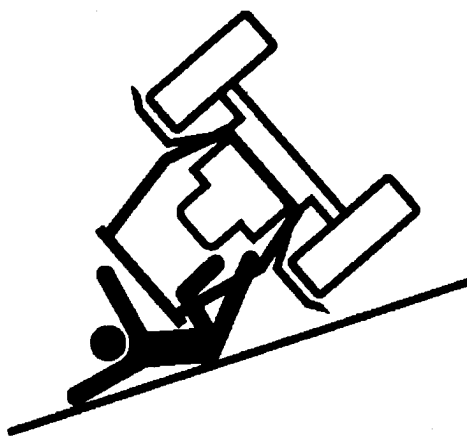

TX03768,0000BA3 -19-26OCT01-1/1

## Add And Operate Attachments Safely

Always verify compatibility of attachments by contacting your authorized dealer. Adding unapproved attachments may affect machine stability or reliability, and may create a hazard for others near the machine.

Ensure that a qualified person is involved in attachment installation. Add guards to machine if operator protection is required or recommended. Verify that all connections are secure and attachment responds properly to controls.

Carefully read attachment manual and follow all instructions and warnings. In an area free of bystanders and obstructions, carefully operate attachment to learn its characteristics and range of motion.

TX03679,00016F0 -19-14SEP00-1/1

## Use Special Care When Operating

**Never use the loader to lift people.** Do not allow anyone to ride in the bucket or use the bucket as a work platform.

**Operate carefully with raised loads.** Raising the load reduces machine stability, especially on side slopes or soft terrain. Drive and turn slowly with a raised load.


**Ensure that objects in the bucket are secure.** Do not attempt to lift or carry objects that are too big or too long to fit inside the bucket unless secured with an adequate chain or other device. Keep bystanders away from raised loads.

**Be careful when lifting objects.** Never attempt to lift objects too heavy for your machine. Assure machine stability and hydraulic capability with a test lift before attempting other maneuvers. Use an adequate chain or sling and proper rigging techniques to attach and stabilize loads.

**Never lift an object above or near another person.**



T148749 -JUN-05DEC01

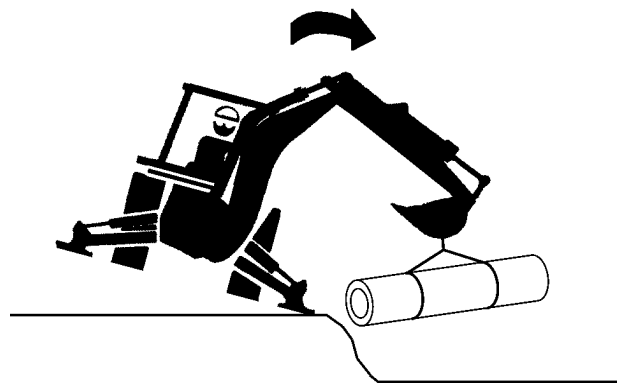



T147438 -JUN-26OCT01

TX03768,0000B70 -19-21DEC01-1/1

## Operating Or Traveling On Public Roads

Machines that work near vehicle traffic or travel slower than normal highway speeds must have proper lighting and markings to assure they are visible to other drivers.

Install additional lights, beacons, slow moving vehicle (SMV) emblems, or other devices and use as required to make the machine visible and identify it as a work machine. Check state and local regulations to assure compliance. Keep these devices clean and in working condition.

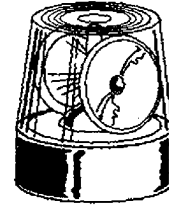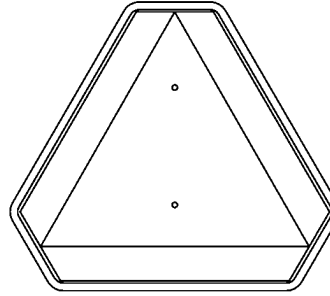

T-141891 -UN-22MAY01

TX03679,00017C8 -19-14JUN01-1/1

## Inspect and Maintain ROPS

A damaged roll-over protective structure (ROPS) should be replaced, not reused.

The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting.

If ROPS was loosened or removed for any reason, inspect it carefully before operating the machine again.

To maintain the ROPS:

- Replace missing hardware using correct grade hardware.
- Check hardware torque.
- Check isolation mounts for damage, looseness or wear; replace them if necessary.
- Check ROPS for cracks or physical damage.

TX03679,000179F -19-20APR01-1/1

## Park And Prepare For Service Safely



**Warn others of service work.** Always park and prepare your machine for service or repair properly.

- Park machine on a level surface and lower equipment to the ground.
- Engage park brake.
- Stop engine and remove key.
- Attach a “Do Not Operate” tag in an obvious place in the operator’s station.

Securely support machine or attachment before working under it.

- Do not support machine with any hydraulically actuated tools or attachments.
- Do not support machine with cinder blocks or wooden pieces that may crumble or crush.
- Do not support machine with a single jack or other devices that may slip out of place.
- Always install boom lock before working on or around this machine with the loader boom raised.

Understand service procedures before beginning repairs. Keep service area clean and dry. Use two people whenever the engine must be running for service work.

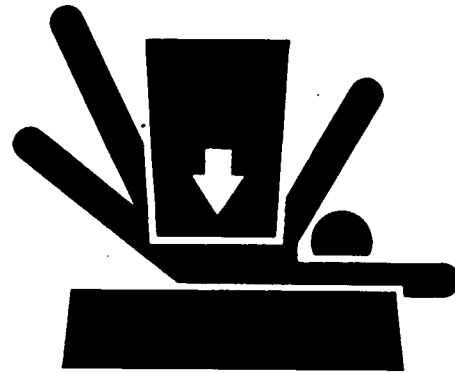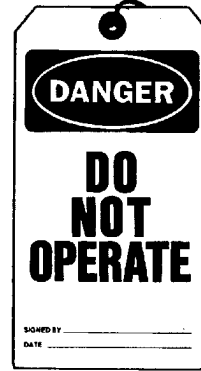

T133332 -19-14DEC01

TS229 -UN-23AUG88

TX03679,0001809 -19-18SEP01-1/1

## Service Cooling System Safely

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.



TS281 -UN-23AUG88

DX,RCAP -19-04JUN90-1/1

00  
01  
14

## Remove Paint Before Welding or Heating

Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.


Remove paint before heating:

- Remove paint a minimum of 101 mm (4 in.) from area to be affected by heating. If paint cannot be removed, wear an approved respirator before heating or welding.
- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Do not use a chlorinated solvent in areas where welding will take place.

Do all work in an area that is well ventilated to carry toxic fumes and dust away.

Dispose of paint and solvent properly.

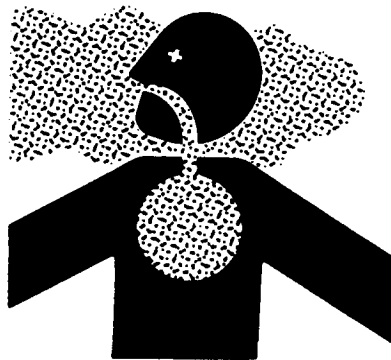

TS220 -UN-23AUG88


DX,PAINT -19-24JUL02-1/1

## Make Welding Repairs Safely

*NOTE: Disable electrical power before welding. Turn off main battery switch or disconnect positive battery cable. Separate harness connectors to engine and vehicle microprocessors.*

Avoid welding or heating near pressurized fluid lines. Flammable spray may result and cause severe burns if pressurized lines fail as a result of heating. Do not let heat go beyond work area to nearby pressurized lines.

Remove paint properly. Do not inhale paint dust or fumes. Use a qualified welding technician for structural repairs. Make sure there is good ventilation. Wear eye protection and protective equipment when welding.

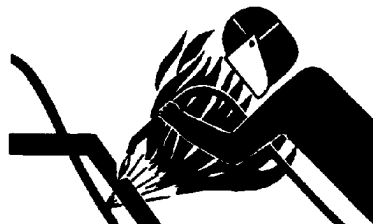


T133547 -UN-31AUG00

TX03679,00016D5 -19-02OCT00-1/1

## Drive Metal Pins Safely

Always wear protective goggles or safety glasses and other protective equipment before striking hardened parts. Hammering hardened metal parts such as pins and bucket teeth may dislodge chips at high velocity.

Use a soft hammer or a brass bar between hammer and object to prevent chipping.

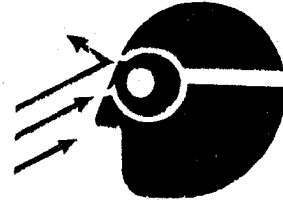

T133738 -UN-14SEP00

00  
01  
15

TX03679,0001745 -19-25SEP00-1/1

00  
01  
16

Safety Signs

**CAUTION**  
Alternate control patterns are available for this backhoe. Always verify control response before operating.

(IF EQUIPPED)

**WARNING**

**AVOID SERIOUS INJURY**  
Block wheels to prevent machine movement before deactivating park brake for towing.

T159028

**WARNING**

**Avoid crushing DO NOT JUMP if machine tips**


T146097

**USE SEAT BELT**

**CAUTION**

**PRESSURIZED DO NOT OPEN HOT**

Remove Slowly  
15 P.S.I.  
AT173610

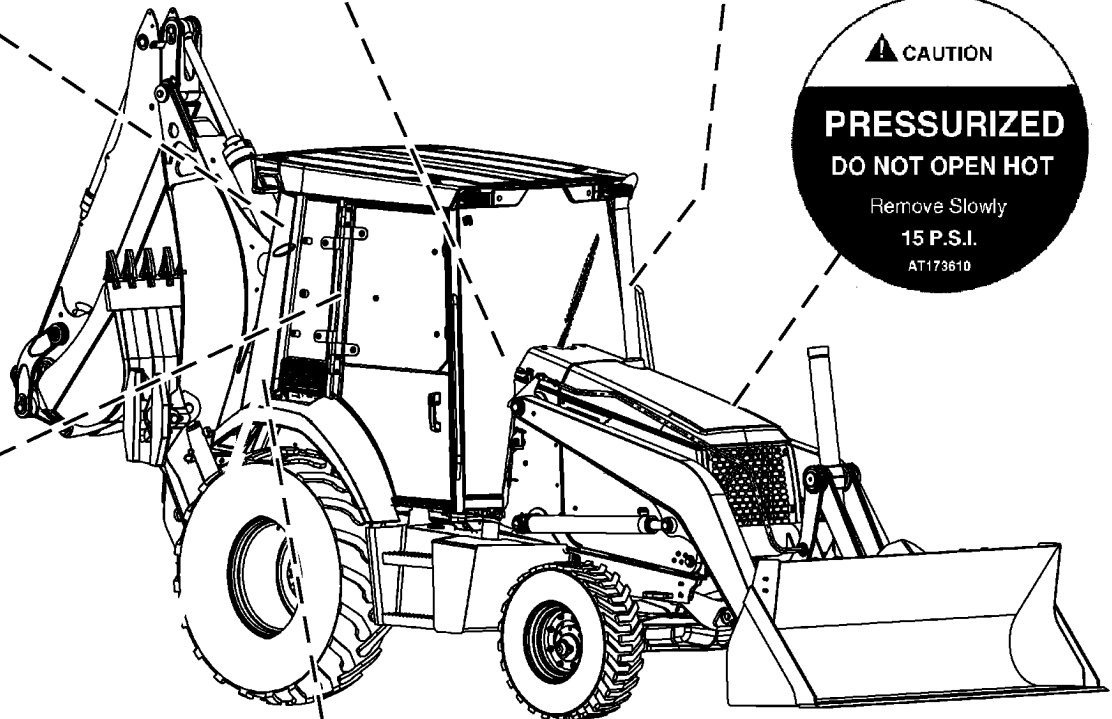

**CAUTION**

- AVOID DEATH OR SERIOUS INJURY - Read and understand Operator's Manual before operating this machine.
- Operate only from seat.
- Before leaving seat:  
Lower working tools to ground, place in neutral and engage parking brake.
- Never carry riders.
- Carry working tools low.
- Engage backhoe boom and swing locks before transporting.
- Avoid contact with overhead obstacles when operating or hauling machine.

T146060

(IF EQUIPPED)

**CAUTION**  
Alternate control patterns are available for this backhoe. Always verify control response before operating.

T165294

T164249

T164249 -19-28JAN03

Continued on next page

HG31779,00001C6 -19-21JAN03-1/2

(IF EQUIPPED)

**⚠ CAUTION**

To prevent unintended motion, always lock hydraulics when not operating backhoe or opening/closing window.

T200658

**⚠ WARNING**

**STAY CLEAR of swing area.**

**Operate controls only from seat.**


T183768

**⚠ WARNING**

Always install boom lock before working on or around this machine with the loader boom raised.

- Empty loader bucket and place in dump position, raise boom until boom lock channel can be positioned on cylinder rod, then stop engine.
- Pull pin and lower lock onto cylinder rod.
- Slowly lower boom until lock stops travel.

T180802

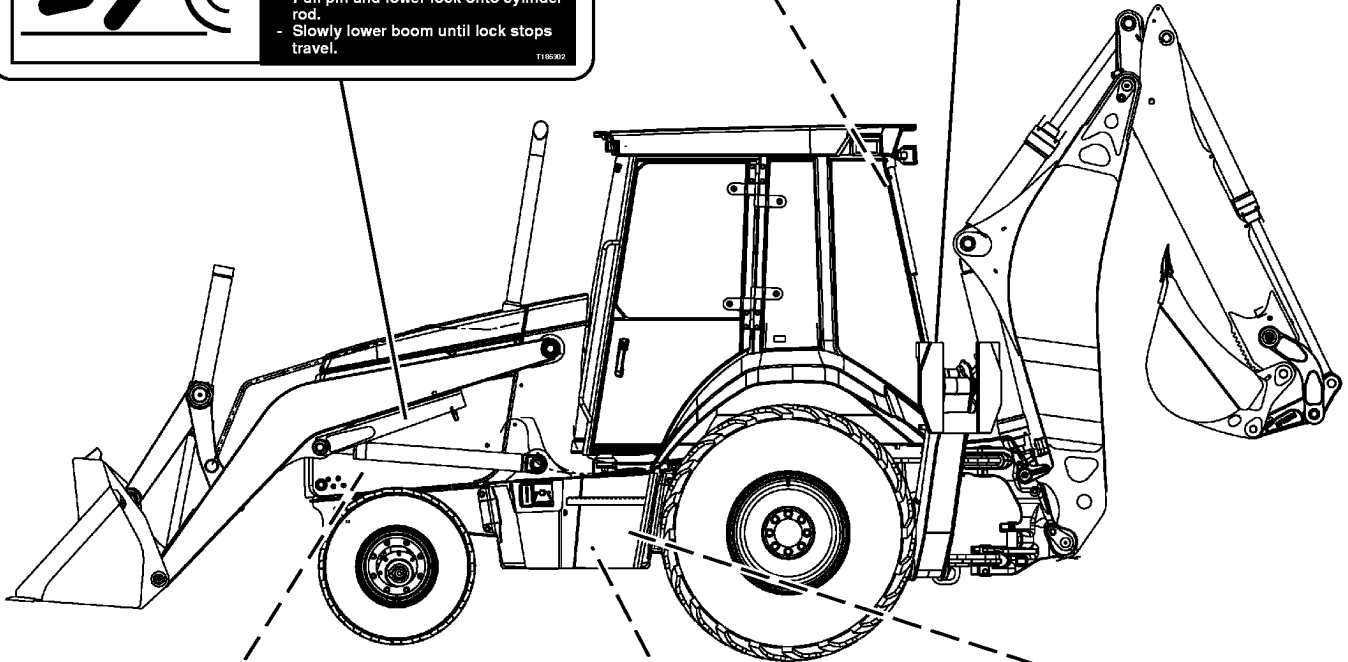

**⚠ DANGER**

**Start only from seat in park or neutral.**

**Starting in gear kills.**

T145103

**⚠ WARNING**

Avoid injury from escaping fluid. Contents of this accumulator are under pressure.

1. Refer to proper Machine Model Technical Manual for disassembly or charging instructions and equipment required.
2. Charge with DRY NITROGEN only.

**Maximum Working Pressure**  
26372 kPa [3825 PSI]

T161124

**⚠ WARNING**

**AVOID INJURY FROM RELEASE OF HIGH PRESSURE OIL**

Always discharge ride-control accumulator before disassembly of hydraulic lines.

See Operator's Manual for instructions.

T165792

T164250

T164250 -19-21JAN03

00  
01  
18

# Section 01 Wheels

01

## Contents

### Page

#### **Group 0110—Powered or Non-Powered Wheels and Fastenings**

Service Equipment and Tools . . . . .	01-0110-1
Specifications . . . . .	01-0110-1
Rear Wheel Assembly	
Remove and Install . . . . .	01-0110-2
Front Wheel Assembly	
Remove and Install . . . . .	01-0110-3
Tire	
Remove and Install . . . . .	01-0110-5

Product: John Deere 310G Backhoe Loader Service Repair Technical Manual  
Full Download: <https://www.bobmanualstore.com/downloads/john-deere-310g-backhoe-loader-service-repair-technical-manual/>

Contents

01

Sample manual. Download All 780 pages at:

<https://www.bobmanualstore.com/downloads/john-deere-310g-backhoe-loader-service-repair-technical-manual/>